



DEVANCO CANADA

LOOP PLACEMENT GUIDE

SINGLE OR DOUBLE SWING GATE

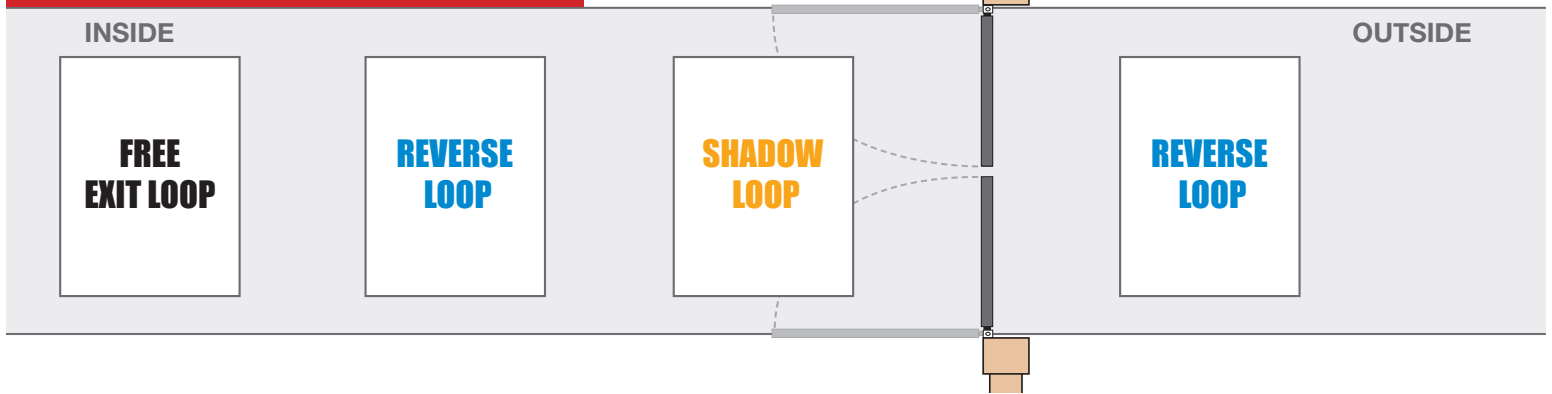

SLIDE GATE

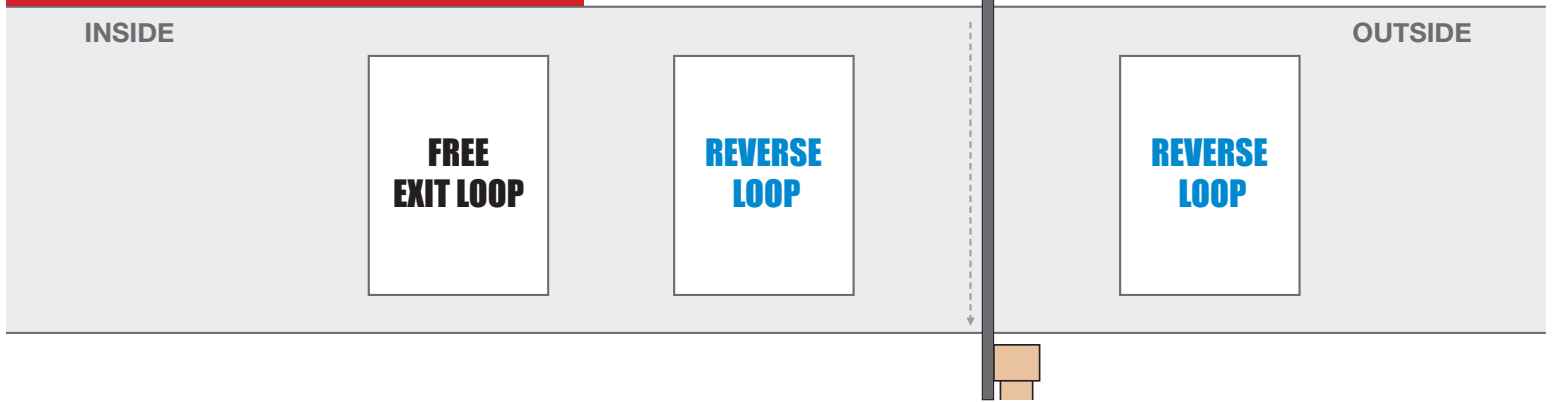

SINGLE BARRIER GATE



- LOOP DISTANCE** = The distance between each loop and from the gate is minimum four feet
- FREE EXIT LOOP** = Provides an open command to the gate operator(s) when a vehicle is exiting the property
- REVERSE LOOP** = Minimizes the potential of the gate closing when a vehicle is present. Number and placement of loops is dependent on application (Also known as interrupt or safety loop)
- SHADOW LOOP** = Prevents the gate from moving only if the gate is fully open or fully closed