

LiftMaster®

PUSH BUTTON DOOR CONTROL Model 883LM

For use with Security+ 2.0™ Garage Door Openers. All Security+ 2.0™ Garage Door Openers have a yellow Learn button and a yellow antenna wire.

WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from electrocution:

- Be sure power is **NOT** connected **BEFORE** installing door control.
- Connect **ONLY** to 12 VOLT low voltage wires.

To prevent possible **SERIOUS INJURY** or **DEATH** from a closing garage door:

- Install door control within sight of garage door, out of reach of children at a minimum height of 5 feet (1.5 m), and away from **ALL** moving parts of door.
- **NEVER** permit children to operate or play with door control push buttons or remote control transmitters.
- Activate door **ONLY** when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- **ALWAYS** keep garage door in sight until completely closed. **NEVER** permit anyone to cross path of closing garage door.


NOTICE: To comply with FCC and or Industry Canada rules (IC), adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. **THERE ARE NO OTHER USER SERVICEABLE PARTS.**

Tested to Comply with FCC Standards for Home or office use. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Installation

- 1 Unplug the garage door opener.
- 2 Strip 1/4" (6 mm) of insulation from one end of the wire and separate the wires.
- 3 Connect one wire to each of the two screws on the back of the door control. The wires can be connected to either screw.
- 4 Mount the door control with the hardware provided.
- 5 Run the white and red/white wire from the door control to the garage door opener. Attach the wire to the wall and ceiling with the staples (if applicable).
- 6 Strip 7/16" (11 mm) of insulation from the other end of the wire near the garage door opener.
- 7 Connect the wire to the red and white terminals on the garage door opener.
- 8 Reconnect power to the garage door opener. The LED behind the Push button on the door control will blink if installed correctly.
- 9 To synchronize the door control to the garage door opener, press the push button until the garage door opener activates (it may take up to 3 presses). Test the door control by pressing the push button, each press of the push button will activate the garage door opener.

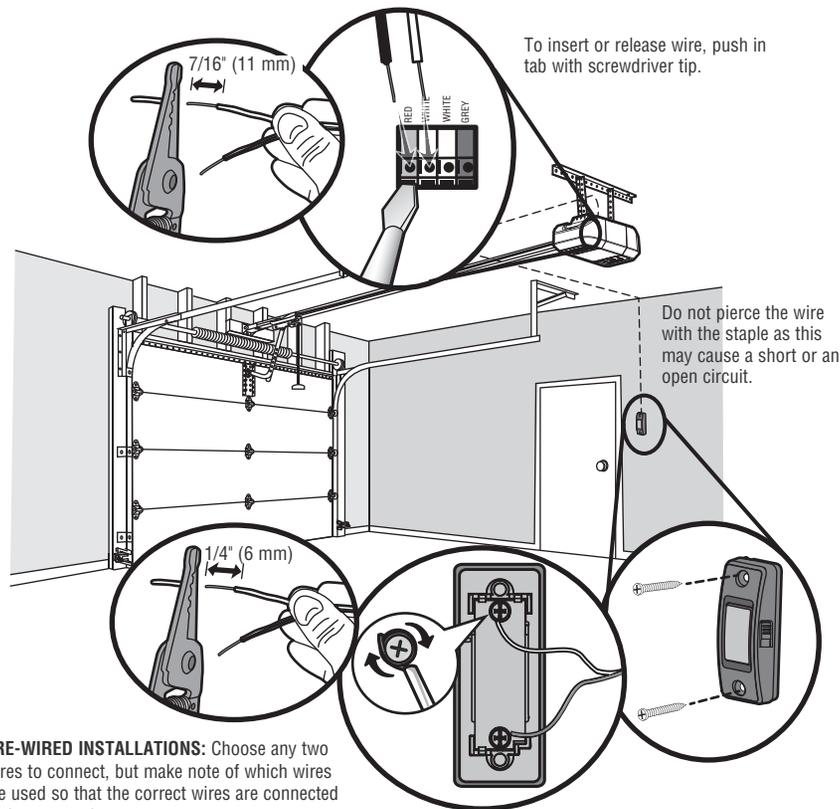

PRE-WIRED INSTALLATIONS: Choose any two wires to connect, but make note of which wires are used so that the correct wires are connected to the garage door opener.

Programming

TO ADD, REPROGRAM, OR CHANGE A REMOTE CONTROL/KEYLESS ENTRY PIN USING THE DOOR CONTROL

- 1 Press and hold the Light button and the Push button until the Push button LED begins to blink.



- 2a Press the button on the remote control that you wish to operate your garage door.



OR

- 2b Enter a 4-digit personal identification number (PIN) of your choice on the keyless entry keypad. Then press the ENTER button.

? ? ? ?
PIN



The garage door opener lights will flash (or two clicks will be heard) when the code has been programmed.

For more information, please visit www.devancocanada.com or call toll free at 855-931-3334

HOW TO ORDER REPAIR PARTS

DEVANCO CANADA

19192 HAY ROAD, UNIT Q
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334
www.devancocanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

- ✓ PART NUMBER
- ✓ DESCRIPTION
- ✓ MODEL NUMBER