


PROGRAMMING INSTRUCTIONS

MODEL# 8L5-OCS

SETTING THE DIP SWITCHES

- 1- Unscrew the four screws (found at each corner of the remote) to gain access to the dip switches.
- 2- Using a pen or screw driver, position the dip switches whichever way you may need. Keep in mind dipswitches 10, 11 and 12 must always be in down position.

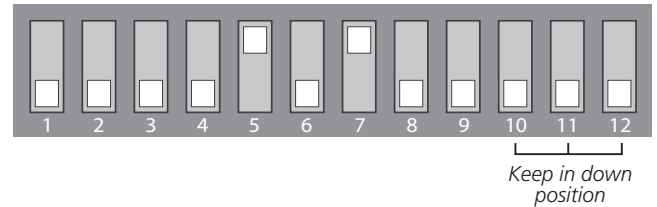


PROGRAMMING INSTRUCTIONS FOR LIFTMASTER® LOGIC 5.0 OPERATOR

- 1 - Place the dial on the appropriate number of the door you wish to program (1 to 8).
- 2 - Press and release RADIO on the control board. The LED light will remain on.
- 3 - Press and release OPEN on the control board. The OPEN LED will flash once, and the RADIO LED will flash three times.
- 4 - Press and release OPEN on the remote control. The RADIO LED will flash three times.
- 5 - Press and release CLOSE on the control board. The CLOSE LED will flash once, and the RADIO LED will flash three times.
- 6 - Press and release CLOSE on the remote control. The RADIO LED will flash three times.
- 7 - Press and release STOP on the control board. The RADIO LED will flash three times.
- 8 - Press and release STOP on the remote control. The RADIO LED will flash three times.
- 9 - Press and release RADIO on the control board to exit programming mode. The LED light will turn off.

Erasing the Memory

- 1 - Press and hold RADIO on the control board until the LED light flashes three times.

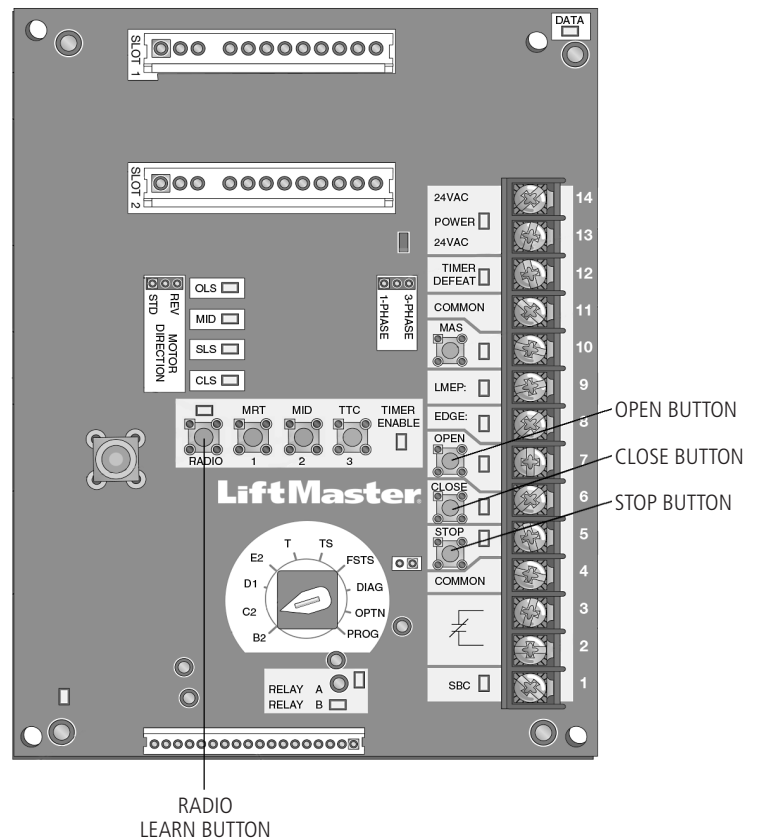

PROGRAMMING INSTRUCTIONS


MODEL# 8L5-OCS

DEVANCO
CANADA

PROGRAMMING INSTRUCTIONS FOR LIFTMASTER® 850LM/860LM RECEIVERS

- 1 - Press and release the CH1 button on the receiver.
- 2 - Press and release the OPEN button on the remote control.
- 3 - Press and release the CH2 button on the receiver.
- 4 - Press and release the CLOSE button on the remote control.
- 5 - Press and release the CH3 button on the receiver.
- 6 - Press and release the STOP button on the remote control.

Note: If a remote control button is not pressed within 30 seconds, the LED next to the selected Learn button will turn OFF. Should this occur, repeat the programming instructions.

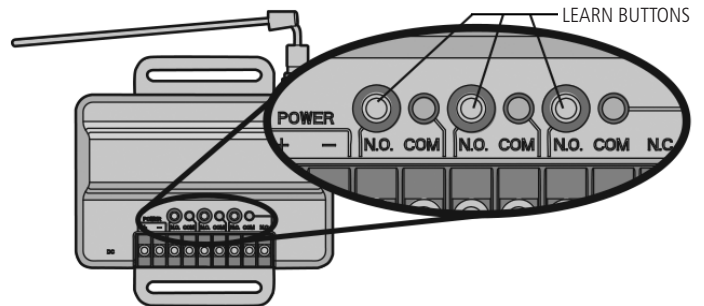

Erasing the Memory

- 1 - Press and hold the Learn button for the channel you want to erase.
Release the button when the corresponding LED turns off. The memory has been erased.

WARNING

TO PREVENT POSSIBLE SERIOUS INJURY OR DEATH:

- ✓ Never allow children to operate or play with remote controls.
- ✓ Always keep remote controls out of reach of children.
- ✓ Activate door only when it is properly adjusted, can be seen clearly, and there are no obstructions to door travel.
- ✓ Never permit anyone to cross path of moving door.
- ✓ Always keep garage door in sight until completely closed.
- ✓ Ensure that all doors are equipped with the appropriate safety devices and that they have been tested and are working properly.
- ✓ Never allow young children near batteries.
- ✓ Immediately notify doctor if battery is swallowed.

HOW TO ORDER REPAIR PARTS

DEVANCO CANADA

19192 HAY ROAD, UNIT Q
SUMMERSTOWN, ON K0C 2E0
TOLL FREE: 855-931-3334
WWW.DEVANCOCANADA.COM

WHEN ORDERING REPAIR PARTS PLEASE SUPPLY THE FOLLOWING INFORMATION:

- ✓ PART NUMBER
- ✓ DESCRIPTION
- ✓ MODEL NUMBER