

# IMPORTANT SAFETY INSTRUCTIONS

## WARNING

To reduce the risk of injury or death to persons

- 1) **READ AND FOLLOW ALL INSTRUCTIONS**
- 2) Disconnect power supply before attempting installation
- 3) For use with a Class 2 supply +6V DC to +40V DC
- 4) For use as entrapment protection device on doors or gates
- 5) Refer to door or gate operator manual for details of accurate connection to the operator
- 6) OPTOEYE photo eyes are to be placed at the bottom of the opening no more than 6 inches (doors)/ 27.5 inches (gates) from the ground
- 7) OPTOEDGE safety edges are to be placed where risk of entrapment or obstruction exists, such as the bottom edge of a vertically closing edge
- 8) **SAVE THESE INSTRUCTIONS**

### Description

The OPTOEDGE and OPTOEYE are entrapment protection devices to safeguard doors or gates acc. to the requirements of UL325. The same optical sensors are used for both systems: for the photo eye OPTOEYE and the sensing edge OPTOEDGE.

### Technical Data

Power Consumption	max. 50 mA
Supply Voltage	6 to 40V DC
Operation Temp. Range:	-13°F to 165°F
Safety Edge	30 ft.
Photo Eye	45 ft.



**For more information, please visit [www.devancocanada.com](http://www.devancocanada.com)  
or call toll free at 855-931-3334**

# INSTALLATION OPTOEYE

Required Tools:




1. Mount photo eye at the door/ gate opening
2. Plug sensors into flexible adapters

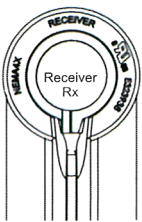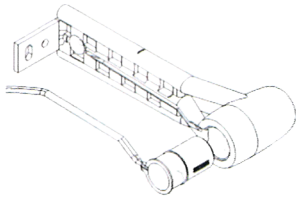


**ATTENTION!**

**Coded Sensors**

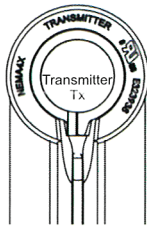


3. Wire photo eyes to the operator and connect to the monitored interface
4. Align transmitter and receiver by adjusting angle and height of the fixture

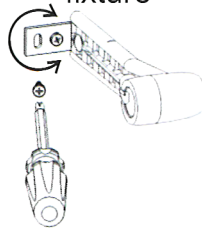


Angle adjustment

 Height adjustment (first loosen wing nut)




Utilize LED'S for alignment and trouble-shooting:

Red LED	Green LED	Status
On	On	Normal Operation
Off	Off	No Power, Check wiring
2 x Blink	On	Bad alignment/ Obstructed beam/ Rx defective
2 x Blink	Off	Check power & wiring to Rx/ Rx defective
3 x Blink	On	Rx receiving sunlight/ interference

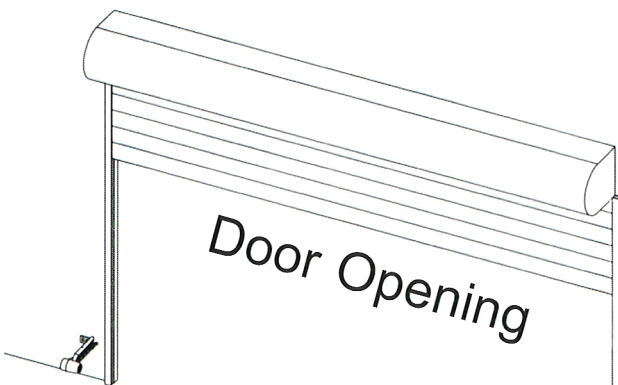



Door Opening

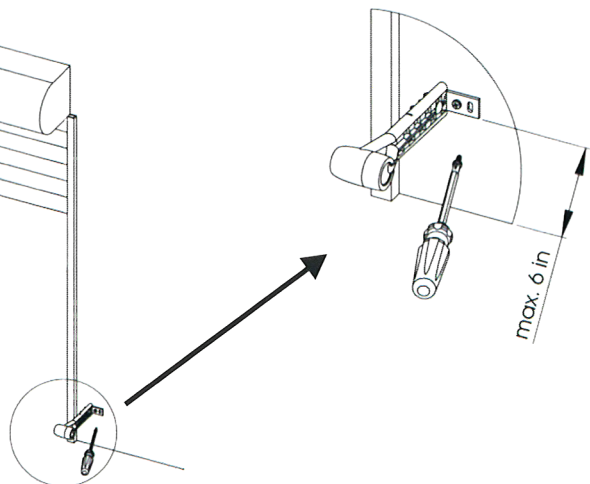


max. 6 in

# INSTALLATION OPTOEDGE

## Required Tools:

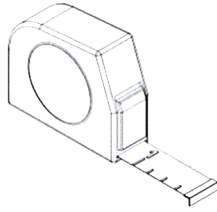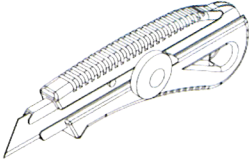

1. Measure and cut the required length of rubber profile (E)
2. Mount an applicable retainer (D) to the bottom edge of the door (A) or the leading edge and pinch-points of the gate
3. Slide the rubber profile (E) on the retainer (D)
4. Plug the sensors (F) into the circular hollow chamber of the rubber profile (E)
5. Wire the sensor cable into a junction box (C) and connect them to a coil cord (B)
6. Connect the opposite end of the coil cord (B) to the monitored interface of the operator

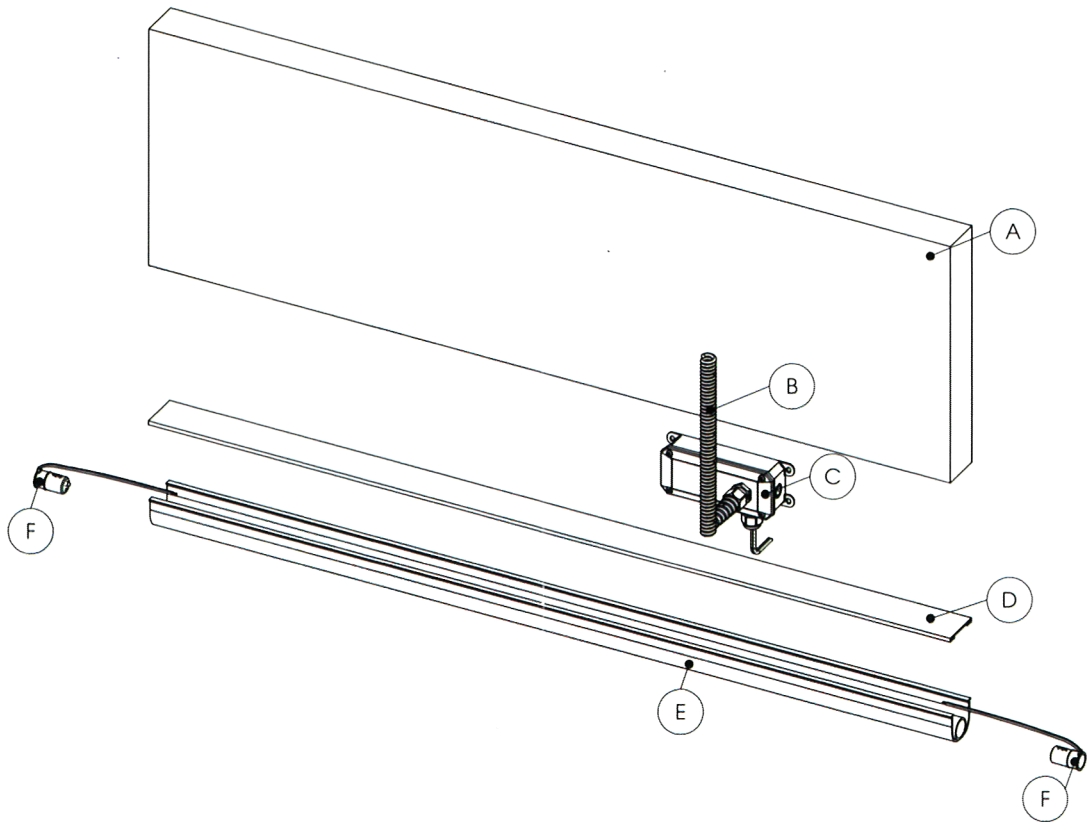

# INSTALLATION DOORS AND GATES


Doors and Gates must be equipped with entrapment protection devices to avoid danger of injury to persons. Before installation of such devices, the installer has to identify all danger zones of the door or gate.

## Doors

Install non-contact sensor in the door opening not higher than 6 in. from the ground


OR

Install contact sensors on the leading edge of the door

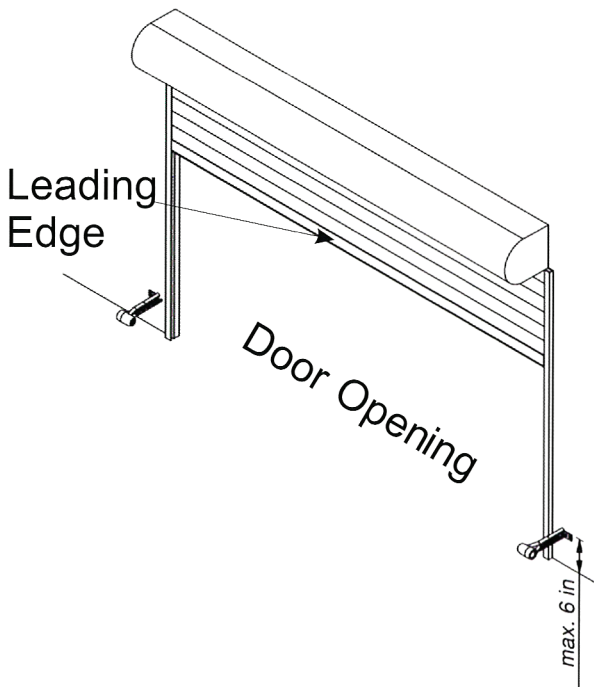


## Gates

Install non-contact sensor in the gate opening not higher than 27 1/2 in. from the ground

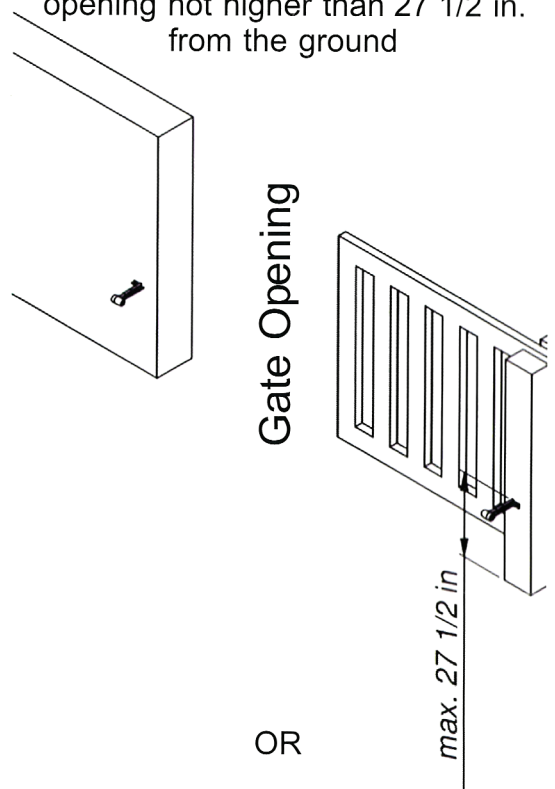

OR

Install contact sensor on the leading edge of the gate and all other identified pinch-points

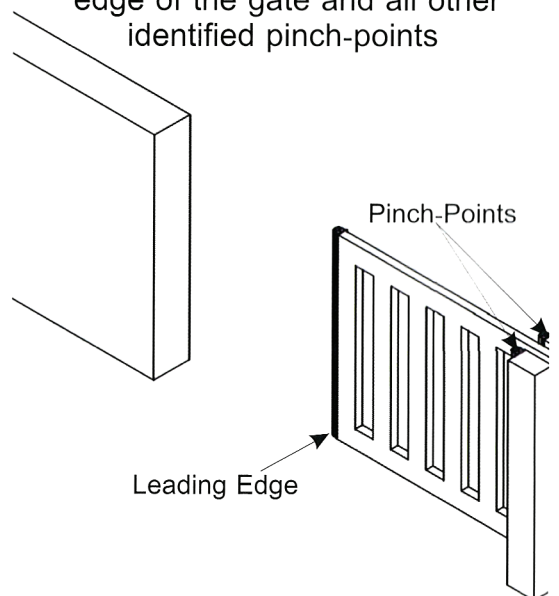

**For more information,  
please visit [www.devancocanada.com](http://www.devancocanada.com)  
or call toll free at 855-931-3334**