

OCDFX2 – PROGRAMMING INSTRUCTION MANUAL

Remote Transmitters

SETUP

Initial Remote Transmitter Setup or Adding a Transmitter

- 1) If the operator is in RUN mode, press the CAL/RUN key to enter the calibration mode.
- 2) Press SCROLL (UP/DN) until the display reads "LEARN NEW XMTR?"
 - This question, along with the instruction, "HIT SET FOR YES" will continuously pan across the display window. (pressing SCROLL or CAL/RUN will cancel the operation.)
- 3) Press SET/CLR key
 - Display will read "PUSH XMTR BUTTON TWO TIMES TO LEARN XMTR"
- 4) Press transmitter button two times.

NOTE: For the Open-Close-Stop model - press the Open button two times. DO NOT press Close or Stop!

- The display will read "XMTR - LEARNED" Where it assigns a random number between 1 and 255 to the transmitter. That transmitter is entered and ready to operate door.

Label/Mark the transmitter with the assigned number.

- 5) Press SCROLL (UP/DN) to move on to another menu item, or CAL/RUN to exit the CAL mode.

To Remove and Individual Transmitter

- 1) If the operator is in RUN mode, press the CAL/RUN key to enter calibration mode.
- 2) Press SCROLL (UP/DN) until display reads "REMOVE XMTR?"
 - This question along with the instruction "HIT SET FOR YES" will continuously pan across the display window. (Pressing SCROLL (UP/DN) or CAL/RUN will cancel operation.)
- 3) Press SET/CLEAR key.
 - A menu displaying the learned transmitter numbers will appear.
 - Press SCROLL (UP/DN) to cycle though the menu to the number of the transmitter to be removed. (Pressing CAL/RUN will cancel the operation.)
- 4) Press SET/CLEAR key
 - The transmitter is removed.
- 5) Press SCROLL (UP/DN) to move on to another menu item or CAL/RUN to exit the CAL mode.

To Remove All Transmitters

- 1) If the operator is in RUN mode, press the CAL/RUN key to enter calibration mode.
- 2) Press SCROLL (UP/DN) until display reads "REMOVE ALL XMTRS?"
 - This question along with the instruction "HIT SET FOR YES" will continuously pan across the display window. (Pressing SCROLL (UP/DN) or CAL/RUN will cancel operation.)
- 3) Press SET/CLEAR key
 - The display will read "ARE YOU SURE?"
- 4) Press SET/CLEAR key.
 - All transmitter are removed.



WARNING

A Moving Door Can Cause Serious Injury or Death

Do not operate any garage door remotely unless the doors automatic reversing system is installed and working properly.

Keep people clear of moving doors.

Do not allow children to play with the transmitter.

NOTES

- 1) This transmitter is dual frequency and works on both 315 and 390 MHz.
- 2) TRANSMITTERS WILL NOT FUNCTION WITH OPERATOR IN CAL MODE!

This device complies with FCC Part 15 rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) This device may not cause interference, and
(2) This device must accept any interference, including interference that may cause undesired operation of this device.

OPTIONAL

Attaching the Optional Visor clip


- 1) Slide clip into the back of the transmitter until it locks (click) in place.
See Figure below.

MAINTENANCE

Replacing the battery

(Transmitter is battery powered)

- 1) Grip the front half of the transmitter case (button side) at the raised rough areas on the ends. See Figure to the right.
- 2) Pinch the front half of the case and lift away from the back.
- 3) Slide the coin type battery out of its holder and properly discard the old battery.
- 4) Slide the new battery (2032) into the holder and snap the case together.

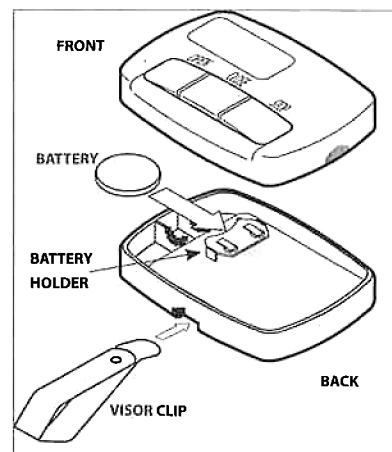

**For more information, please visit www.devancocanada.com
or call toll free at 855-931-3334**