

Doorlec DC-3200T 32-Channel O/C/S Transmitter 313 MHz


Programming Instructions

1. Transmitter

Inside this 32-channel transmitter is a 8-key switch. The keys numbered 1-5 are hard-wired on the circuit board and are not operational.

Use a pencil or ball-point pen to set the keys numbered 6、7、8 to ON or OFF positions.

In the example below, keys numbered 6、8 are set to ON, keys numbered 7 set to OFF.

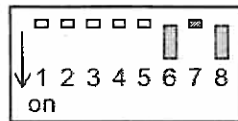

2. Associated Receivers

There are totally 32 differently coded receivers can be controlled. Inside each receiver is also a 8-key switch. Set the keys as follows:

Keys numbered 6、7、8: Set to the same ON/OFF positions as the corresponding keys in the transmitter.

Keys numbered 1-5: First decide the number of the receiver and set the keys as the list below:

The numbers showed in below table are set to OFF

The numbers without showed in below table are set to ON

No.	A	B	C	D
1	2	1,2	---	1
2	2,3	1,2,3	3	1,3
3	2,4	1,2,4	4	1,4
4	2,3,4	1,2,3,4	3,4	1,3,4
5	2,5	1,2,5	5	1,5
6	2,4,5	1,2,4,5	4,5	1,4,5
7	2,3,5	1,2,3,5	3,5	1,3,5
8	2,3,4,5	1,2,3,4,5	3,4,5	1,3,4,5

For example, for the receiver numbered B5 the keys 1, 2, 5 sets to OFF position and the keys 3, 4 sets to ON position



**For more information, please visit www.devancocanada.com
or call toll free at 855-931-3334**

***HOW TO ORDER
REPAIR PARTS***

DEVANCO CANADA

19192 HAY ROAD, UNIT Q
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334

www.devancocanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE
FOLLOWING INFORMATION:**

- ✓ PART NUMBER
- ✓ DESCRIPTION
- ✓ MODEL NUMBER