

 


**Read instructions thoroughly BEFORE beginning.** If using the Universal Remote Control with residential door openers, the Universal Remote Control must be used only with door openers manufactured after 1993 that utilize photoelectric sensors. The photoelectric sensors are always located on or near the bottom of the door track.


The Universal Remote Control can be programmed to activate up to two products, such as a garage door opener, gate operator, or commercial door operator. Each button on the Universal Remote Control works independently of the other and must be programmed separately. The second button on the Universal Remote Control can be programmed to different products without affecting the first button programmed. The images throughout this manual are for reference only and your product may look different.

### PROGRAMMING

- 1** Start with your gate or garage door closed.

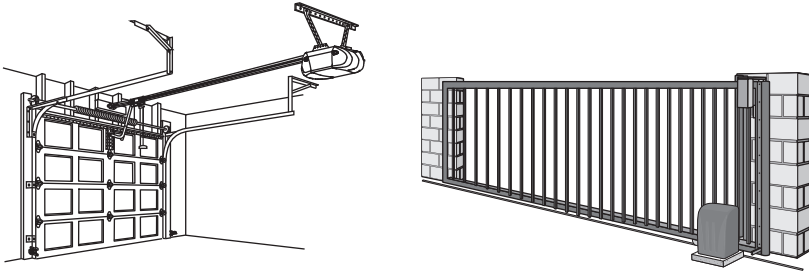


 - 3** Press and release the SMART/LEARN button on your product.

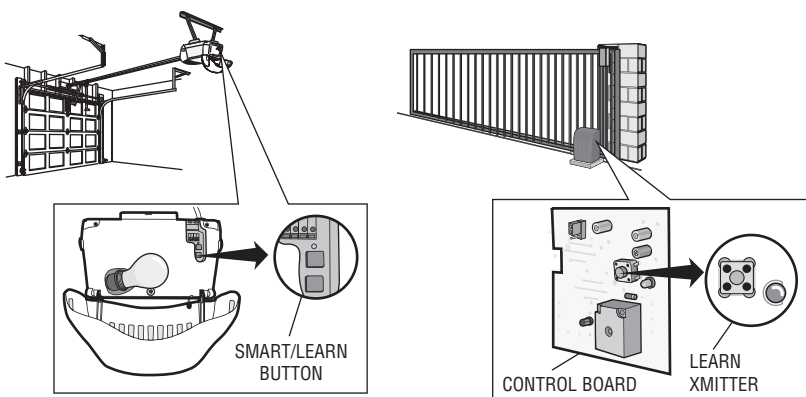


**OR**

 Match the remote control DIP SWITCHES to the existing receiver or existing remote control.

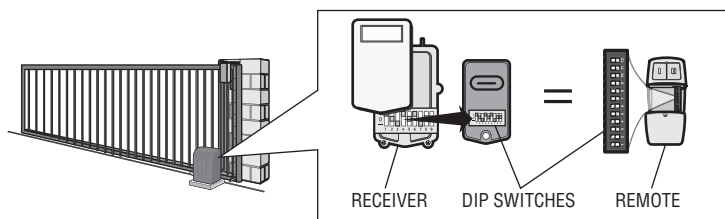


**NOTE:** The SMART/LEARN button or DIP SWITCHES are located either on the product or in an external receiver on or near the product. Consult your product owner's manual to locate the SMART/LEARN button or DIP SWITCHES.

 - 5** Press the program button to exit programming mode. Programming is now complete.

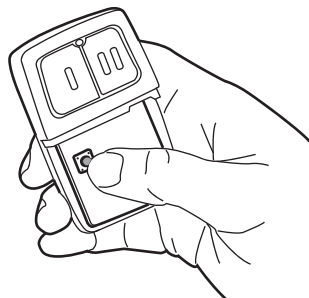

 - 2** Open the remote control by sliding the battery cover down. Press and hold the program button until the LED lights (approximately 2 seconds).

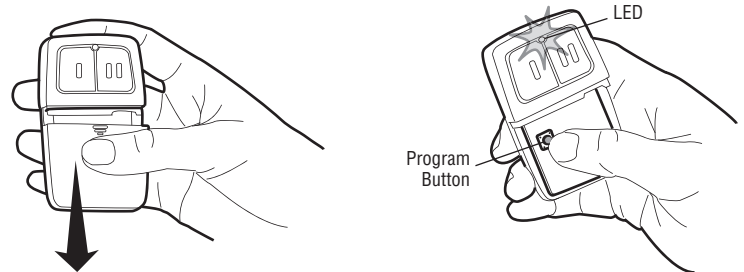


- 4** Press and release the button. When the LED stops flashing, continue to press and release the button until a click is heard from the garage door opener, a light on the garage door opener blinks, the garage door opens/closes, or a beep is heard from the gate operator (maximum 18 times).

**OR**

 Press and release the Universal Remote Control button...

- ... **8 times** Chamberlain®\* Yellow Button 2011-Current
- ... **3 times** Chamberlain®\* Purple Button 2005-Current
- ... **2 times** Chamberlain®\* Orange Button 1997-2005
- ... **4 times** Chamberlain®\* Green Button 1993-1996
- ... **5 times** Genie Overhead Door® Intellicode 1995-Current
- ... **6 times** Genie Overhead Door® Intellicode 2005-Current
- ... **1 time** Linear® Mega-Code 1997-Current
- ... **7 times** Stanley® Security Code 1998
- ... **9 times** Wayne Dalton® Rolling Code 372.5 MHz 1999-Current
- ... **14 times** Linear Multicode® 10 Position Dip Switch
- ... **16 times** Stanley Multicode® 10 Position Dip Switch
- ... **18 times** Linear® 8 Position Dip Switch

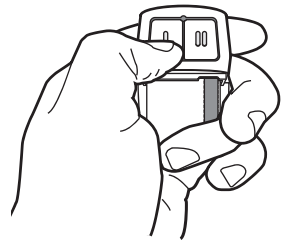


The LED on the Universal Remote Control **MUST** stop blinking between each press of the button. The code is accepted when a click or beep is heard, a light blinks, or the door/gate activates.

\*LiftMaster, Do-It, Master Mechanic, Raynor, True Value and Sears Craftsman are compatible with Chamberlain technology.

- 6** Press the programmed button to activate your product. If product does not activate, repeat the programming steps 3-6 again.

 **NOTE:** If you have a 2 position DIP SWITCH and programming fails, reverse DIP SWITCHES (OFF to ON and ON to OFF).

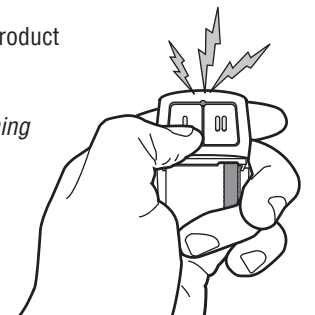

### REMOTE CONTROL BATTERY

#### WARNING

 
To prevent possible **SERIOUS INJURY** or **DEATH**:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with 3V2032 coin batteries.
- **DO NOT** recharge, disassemble, heat above 212°F (100°C) or incinerate.

NOTICE: To comply with FCC and/or Industry Canada (IC) rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS. Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

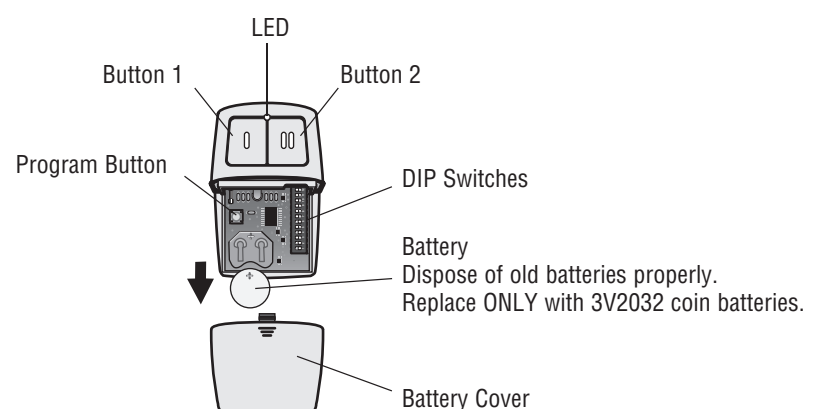

Dispose of old batteries properly. Replace **ONLY** with 3V2032 coin batteries.

## ***HOW TO ORDER REPAIR PARTS***

### **DEVANCO CANADA**

19192 HAY ROAD, UNIT Q  
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334  
[www.devancocanada.com](http://www.devancocanada.com)

**WHEN ORDERING REPAIR PARTS  
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

- ✓ PART NUMBER
- ✓ DESCRIPTION
- ✓ MODEL NUMBER