


32- CHANNEL / 3-BUTTON TRANSMITTER CODING INSTRUCTIONS

1. Transmitter

Inside this 32-channel transmitter is a 8-key switch. The keys numbered 1-5 are hard-wired on the circuit board and are not operational. Use a pencil or ball-point pen to set the keys numbered 6, 7, and 8 to ON or OFF positions. In the example below, keys numbered 6 and 8 are set to ON, the key numbered 7 is OFF.

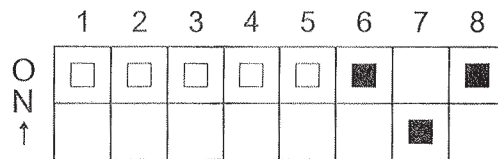


2. Associated Receivers

There are totally 32 differently coded receivers can be controlled. Inside each receiver is also a 8-key switch. Set the keys as follows:

- (a) keys 6, 7, and 8: Set to the same ON or OFF positions as the corresponding keys in the transmitter.
- (b) keys 1-5 : First decide the number of the receiver and set the keys as the list below:

NO.	A	B	C	D
1	2	1, 2	---	1,
2	2, 3	1, 2, 3	3	1, 3
3	2, 4	1, 2, 4	4	1, 4
4	2, 3, 4	1, 2, 3, 4	3, 4	1, 3, 4
5	2, 5	1, 2, 5	5	1, 5
6	2, 4, 5	1, 2, 4, 5	4, 5	1, 4, 5
7	2, 3, 5	1, 2, 3, 5	3, 5	1, 3, 5
8	2, 3, 4, 5	1, 2, 3, 4, 5	3, 4, 5	1, 3, 4, 5

For example, for the receiver numbered B5 the keys 1, 2, 5, and 7 are set to OFF.

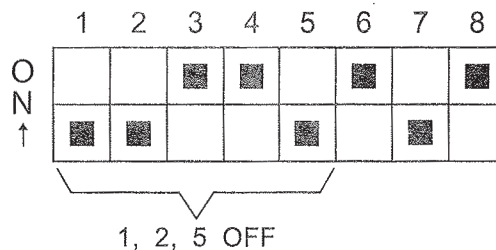

P/N KM-5278

***HOW TO ORDER
REPAIR PARTS***

DEVANCO CANADA

19192 HAY ROAD, UNIT Q
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334

www.devancocanada.com

**WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE
FOLLOWING INFORMATION:**

- ✓ PART NUMBER**
- ✓ DESCRIPTION**
- ✓ MODEL NUMBER**