
P-8833TC

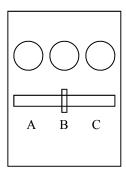

Three Button Transmitter with ABC Slide Switch Can Control Up to 9 doors. Match dipswitches 1, 2, 3, 4, 5, 7 & 8 on both transmitter and receiver. Set the 6th & 9th dipswitch in individual receivers accordingly.

Receiver	Button	Slide Switch	6th Dipswitch on Receiver	9th dipswitch on Receiver
Door 1	Left	A	"+"	"+"
Door 2	Middle	A	"+"	"0"
Door 3	Right	A	"+"	٠٠
Door 4	Left	В	"O"	"+"
Door 5	Middle	В	"O"	"O"
Door 6	Right	В	"0"	٠٠
Door 7	Left	С	٠٠	"+"
Door 8	Middle	С	٠٠	"O"
Door 9	Right	С	""	""

[&]quot;Changes or modifications not expressively approved by the party responsible for compliance could void the user's authority to operate the equipment"