

# GARAGE DOOR RADIO CONTROL

## PROGRAMMING INSTRUCTIONS

### FOR MODEL MT-1000

Remove the back cover from both the transmitter and the receiver for access to the code switches. Inside is a 10-bits dip switch exposed on the circuit board. Use a pencil or ball-point pen to set the 10-bits dip switch to the code of your choice.

For example, bits numbered 1,3,5,7,9 are set to ON, bits numbered 2, 4, 6, 8, 10 are OFF in the transmitter as below:

	1	2	3	4	5	6	7	8	9	10
ON	■		■		■		■		■	
↑		■		■		■		■		■

Then, to match the code of the transmitter, set the same bits numbered at ON/OFF position as the corresponding bits in the receiver as above example.

Be sure both are set to the same code, since a different setting of just one dip switch will prevent operation.

## **FOR MORE INFORMATION**

### **DEVANCO CANADA**

19192 HAY ROAD, UNIT Q  
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334  
[www.devancocanada.com](http://www.devancocanada.com)

**WHEN ORDERING REPAIR PARTS  
PLEASE SUPPLY THE FOLLOWING INFORMATION:**

- ✓ PART NUMBER
- ✓ DESCRIPTION
- ✓ MODEL NUMBER