Replacement and Programming Instructions

Transmitters: Compatibility and Replacement

		Replacemer	nt Product	Discontinued Products		
		Accump	 3-Button Transmitter. Operates up to 32 doors by using a combination of 2-rotary dials and dip switch keys. Open / Close / Stop function. LED indicator. Soft-touch push-buttons, including a bright red stop button for easy identification. Includes 4 mounting screws and anchors. 2 AA batteries. Wall or post mounting. 	RADIO050 (MCT-32)		 3-Button Transmitter. Operates up to 32 doors. Open / Close / Stop function. LED indicator. 9V battery. Wall or post mounting.
Transmitter	RADIOEM932			RADIO042 (MCT-4)		 3-Button Transmitter. Operates up to 4 doors. Open / Close / Stop function. LED indicator. 9V battery. Wall or post mounting.
				RADIO047 (MCT-1)		 3-Button Transmitter. Operates 1 door. Open / Close / Stop function. LED indicator. 9V battery. Wall or post mounting.


> Replacing RADIO050 (32-Door Transmitter) with RADIOEM932 (32-Door Transmitter):

The transmitter has 8 dip switching keys and two rotary dials (Letters: A to D, *) and (Numbers: 1 to 8, *) which permit for a proper door selection. RADIOEM932 can control up to 32 differently coded receivers.

With the use of a screwdriver or a pen, place the dip switch keys on the RADIOEM932 transmitter at the same positions as those found on RADIO050. To operate the different receivers, use the same rotary dial positions (A to D and 1 to 8) on the RADIOEM932 transmitter as those found on RADIO050.

Receiver Dip Switch Keys Positioning (RADIO031 / RADIO037) for up to 32-Doors:

- → Dip Switch Keys #6 to #8 = must be at the same ON / OFF positions as the transmitter.
- → Dip Switch Keys #1 to #5 = coding of the receiver (32 combinations). Refer to Table 1, p. 2 for DIP switch keys positioning.

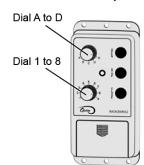

Replacement and Programming Instructions

Table 1 - Receiver Dip Switch Keys Positioning (RADIO031 / RADIO037) for up to 32-Doors

Transmitter	A		В		С		D	
Dial			Rece	iver Dip Swi	-			
Positions	ON	OFF	ON	OFF	ON	OFF	ON	OFF
1	1, 3, 4, 5	2	3, 4, 5	1, 2	1, 2, 3, 4, 5	-	2, 3, 4, 5	1
2	1, 4, 5	2, 3	4, 5	1, 2, 3	1, 2, 4, 5	3	2, 4, 5	1, 3
3	1, 3, 5	2, 4	3, 5	1, 2, 4	1, 2, 3, 5	4	2, 3, 5	1, 4
4	1, 5	2, 3, 4	5	1, 2, 3, 4	1, 2, 5	3, 4	2, 5	1, 3, 4
5	1, 3, 4	2, 5	3, 4	1, 2, 5	1, 2, 3, 4	5	2, 3, 4	1, 5
6	1, 3	2, 4, 5	3	1, 2, 4, 5	1, 2, 3	4, 5	2, 3	1, 4, 5
7	1, 4	2, 3, 5	4	1, 2, 3, 5	1, 2, 4	3, 5	2, 4	1, 3, 5
8	1	2, 3, 4, 5	-	1, 2, 3, 4, 5	1, 2	3, 4, 5	2	1, 3, 4, 5

Example: For a receiver to work on **B-5**, dip switch keys **#1**, **#2** and **#5** must be set to **OFF**, keys **#3** and **#4** must be set to **ON** and keys **#6 to #8** need to match the transmitter.

	1	2	3	4	5	6	7	8
ON						Must match with		
1						transmitter		er

> Replacing RADIO042 (4-Door Transmitter) with RADIOEM932 (32-Door Transmitter):

Dial A to D

Dial on 3

The transmitter has 8 switching keys and two rotary dials (Letters: A to D, *) and (Numbers: 1 to 8, *) which permit for a proper door selection.

With the use of a screwdriver or a pen, place the dip switch keys on the RADIOEM932 transmitter at the same positions as those found on RADIO042. To operate the different receivers, use the same Letter rotary dial positions (A to D) and leave the Number dial to *.

Receiver Dip Switch Keys Positioning (RADIO031 / RADIO037) for up to 4-Doors:

- → Dip Switch Keys #3 to #8 = must be at the same ON / OFF positions as the transmitter
- → Dip Switch Keys #1 and #2 = coding of the receiver (4 combinations). Refer to Table 2 for DIP switch keys positioning.

Table 2 - Receiver Dip Switch Keys Positioning (RADIO031 / RADIO037) for up to 4-Doors

Transmitter	1	4		В	С		D	
Dial Positions			Rece	iver Dip Swi	,			
Fositions	ON	OFF	ON	OFF	ON	OFF	ON	OFF
*	1	2	-	1, 2	1, 2	-	2	1

Example: For a receiver to work on B, dip switch keys #1 and #2 must be set to OFF and keys #3 to #8 need to match the transmitter

	1	2	3	4	5	6	7	8	
ON									
↑				Must r	natch w	ith trans	smitter		

Replacement and Programming Instructions

> Replacing RADIO047 (1-Door Transmitter) with RADIOEM932 (32-Door Transmitter):


The transmitter has 8 switching keys and two rotary dials (Letters: A to D, *) and (Numbers: 1 to 8, *) which permit for a proper door selection.

With the use of a screwdriver or a pen, place the dip switch keys on the RADIOEM932 transmitter at the same positions as those found on RADIO047. Also set **both rotary dials** on the RADIOEM932 transmitter to *.

Receiver Dip Switch Keys Positioning (RADIO031 / RADIO037) for 1-Door:

→ Dip Switch Keys #1 to #8 = must be at the same ON / OFF positions as the transmitter.

ON	1	2	3	4	5	6	7	8		
↑	Must match with transmitter									

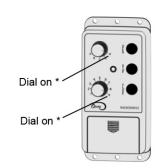

Receivers: Compatibility and Replacement

		Replaceme	ent Product	Discontinued Products			
iver		0	 Controls 1 Operator. Easy installation on wall close to operator or directly onto operator's control box. Nema 1 enclosure. Operates on 24VAC/VDC. 	RADIO031 (MCR-32 N4)		 Controls 1 Operator. Nema 4/12 enclosure. Includes commercial antenna. Operates on 24VAC. 	
Receiver	RADIORE900	<u>□</u>	 LED indicator. Includes 2 mounting screws and anchors. Optional commercial antenna (RADIO029) and 15' coaxial cable (CABLE015) available for increased range and distance. 	RADIO037 (MCR-32)	Menore	 Controls 1 Operator. Nema 1 enclosure. Includes commercial antenna. Operates on 24VAC. 	

> Replacing RADIO031 or RADIO037 Receivers with a new RADIORE900 Receiver and Pairing it to an Existing Transmitter:


- 1. Make sure the existing transmitter's dials are set to the proper positions.
- 2. Press the **LEARN** button on the RADIORE900 receiver. The **RED LED** will ** **BLINK**. You will have 15 sec. to complete the pairing or you will need to restart.
- 3. Press any Button on the existing transmitter.
- 4. The **RED LED** will stop 4 blinking. The RADIORE900 has now been paired with the existing transmitter.
- 5. Only one transmitter needs to be matched per receiver. The other transmitters with the same dip switch configuration will pair automatically.

Replacement and Programming Instructions

Pairing RADIOEM932 Transmitter to RADIORE900 Receiver:

- 1. Make sure the dip switch keys inside the RADIOEM932 transmitter are set to the proper positions.
- 2. Make sure the RADIOEM932 transmitter's dials are set to the proper positions.
- 3. Press the **LEARN** button on the RADIORE900 receiver. The **RED LED** will ** **BLINK**. You will have 15 sec. to complete the pairing or you will need to restart.
- 4. Press any Button on the transmitter.
- 5. The **RED LED** will \P stop blinking. The RADIORE900 has now been paired with the transmitter.
- 6. Only one transmitter needs to be matched per receiver. The other transmitters with the same dip switch configuration will pair automatically.

Wiring RADIORE900 Receiver for Open / Close / Stop Function

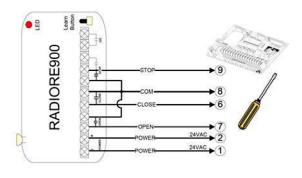

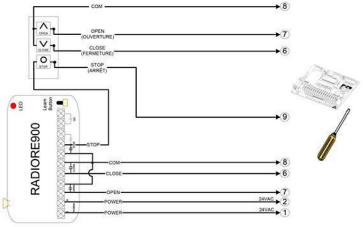


Figure 1 - Wiring of RADIORE900 Receiver for Electronic Control BOARD

Figure 2 - Wiring of RADIORE900 Receiver and 3-Push Button Station for Electronic Control Board

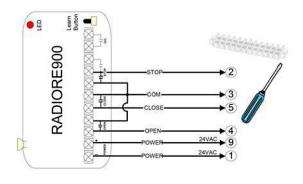


Figure 3 - Wiring of RADIORE900 Receiver for Electro-Mechanical Control

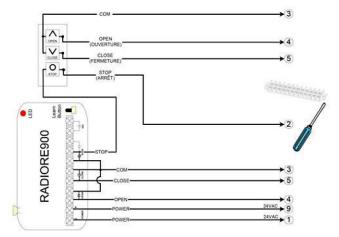


Figure 4 - Wiring of RADIORE900 Receiver and 3-Push Button Station for Electro-Mechanical Control

HOW TO ORDER REPAIR PARTS

DEVANCO CANADA

19192 HAY ROAD, UNIT Q SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334

www.devancocanada.com

WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE
FOLLOWING INFORMATION:

- **✓ PART NUMBER**
- **✓ DESCRIPTION**
- **✓ MODEL NUMBER**