## STATION079

## **PUSH-BUTTON CONTROL STATION CONNECTION**

## WARNING

Wall controls must be mounted in clear view of the door, far enough from the door, or positioned such
that the user is prevented from coming in contact with the door while operating the controls and at least
5 feet (1,5 m) above the standing surface.

## Push-Button Control Station (PBS) Connection

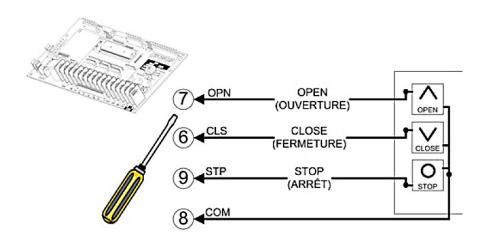


Figure 2 - STATION 020 / 084 3-PBS Open / Close / Stop

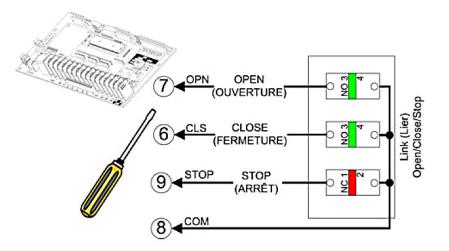


Figure 3 - STATION 041 / 049 / 056 / 076 / 078 3-PBS Open / Close / Stop

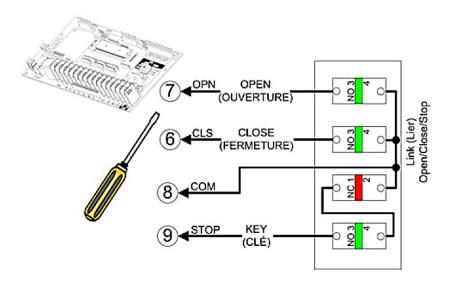


Figure 4 - STATION 079 3-PBS Open / Close / Stop with Key Lock-out

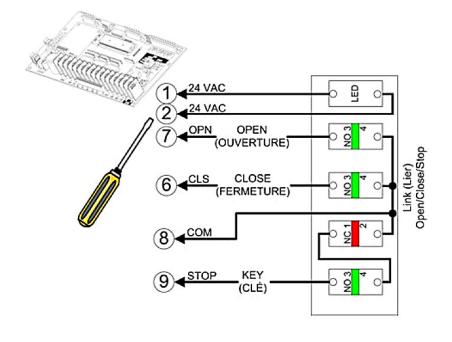


Figure 5 - STATION 080 3-PBS Open / Close / Stop with Key Lock-out and Light

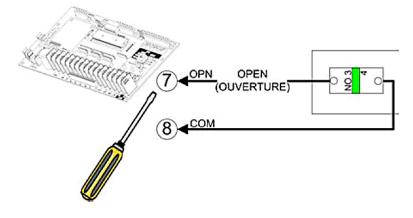


Figure 6 - STATION 001 / 081 1-PBS Open

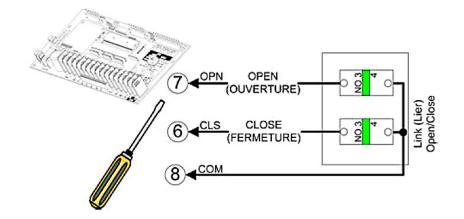


Figure 7 - STATION 010 / 082 2-PBS Open / Close