


INSTALLATION INSTRUCTIONS FOR THE BK020/PR-BOLT

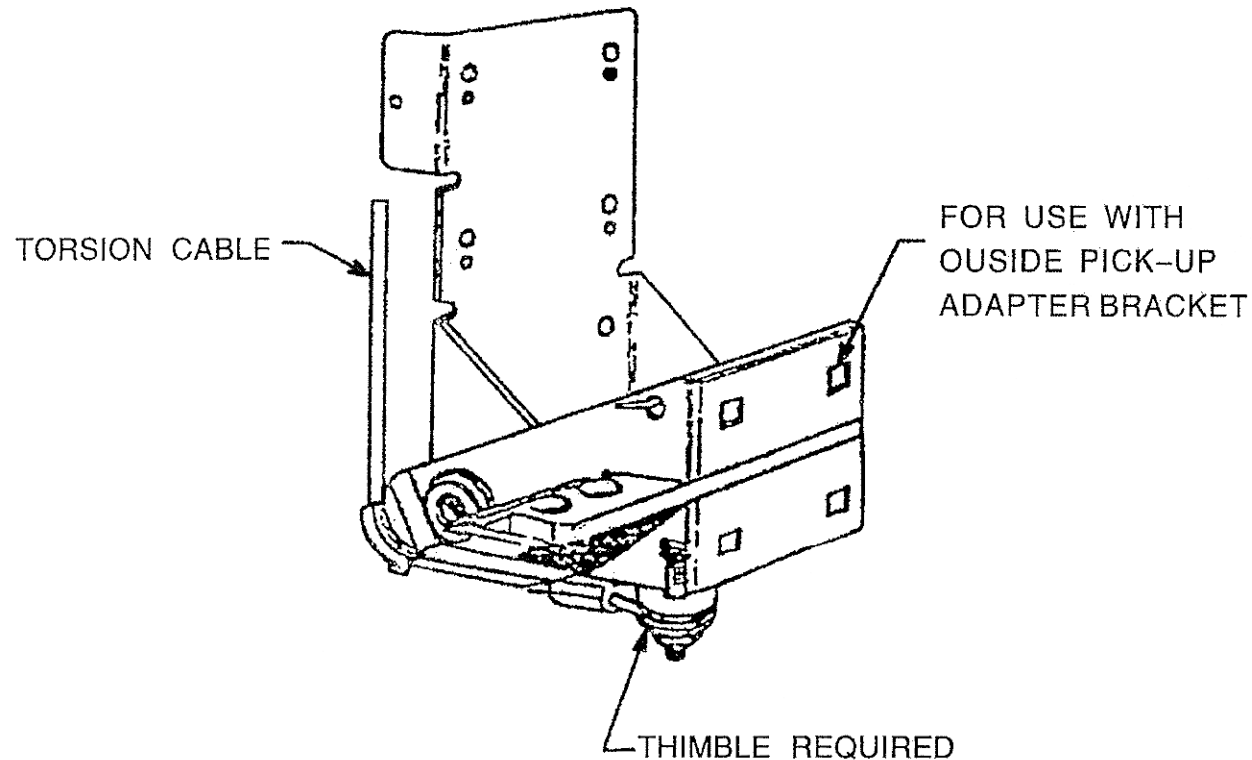

NOTES:


1. IT IS RECOMMENDED THAT THE 2" BRACKETS BE USED ON DOORS THAT HAVE OVER 70 LBS OPEN DOOR WEIGHT, AND THE 3" BRACKETS BE USED ON DOORS THAT HAVE OVER 100 LBS OPEN DOOR WEIGHT.
2. FOR 2" BROKEN CABLE BOTTOM BRACKET (2" TRACK) ADD 4" TO TORSION CABLE LENGTHS.
FOR 3" BROKEN CABLE BOTTOM BRACKET (3" TRACK) ADD 5" TO TORSION CABLE LENGTHS.

DEVANCO  **CANADA**

For more information, please visit www.devancocanada.com or call toll free at 855-931-3334

852SB6020X – 2" SAFETY BOTTOM BRK

CHG. NO.	LET.	DESCRIPTION	BY	DATE
----------	------	-------------	----	------

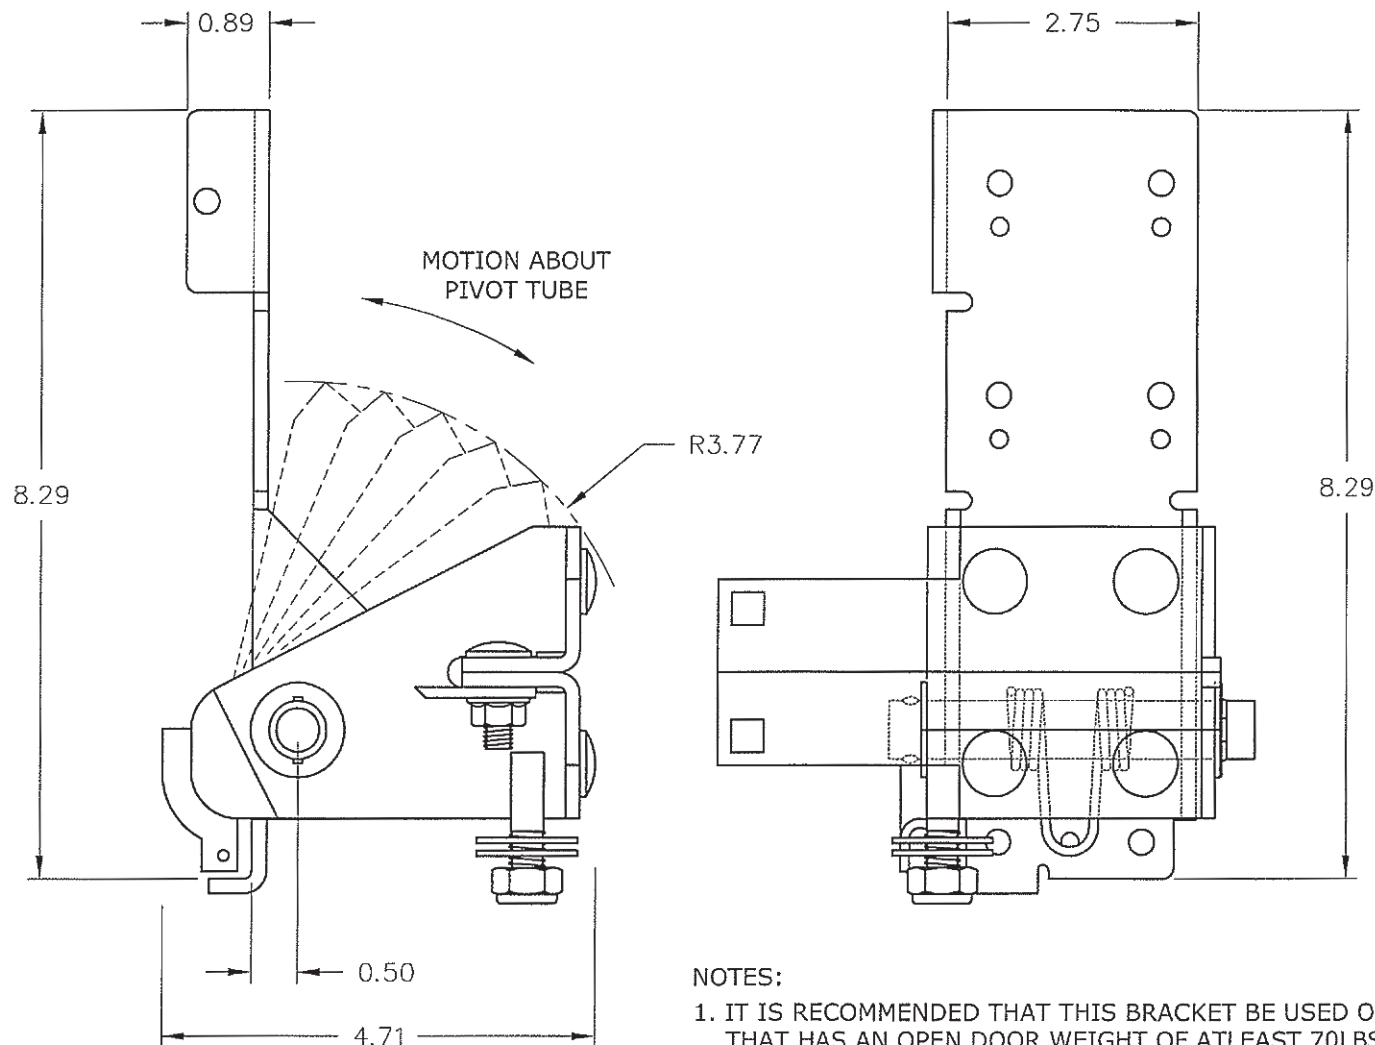

NOTES:

1. IT IS RECOMMENDED THAT THIS BRACKET BE USED ON A DOOR THAT HAS AN OPEN DOOR WEIGHT OF ATLEAST 70LBS (31.8KG)
2. IT IS RECOMMENDED THAT 4" OF ADDITIONAL CABLE LENGTH BE ADDED TO YOUR CABLE FOR FULL FUNCTION OF THIS BRACKET.

2" SAFETY BOTTOM BRACKET ASSEMBLY

NOTE: LEFT HAND SHOWN,
RIGHT HAND A MIRRORED OPPOSITE.

<div> <div></div> <div>SCALE:</div> </div>	MATERIAL				<div> <div>DEVANCO</div> <div>CANADA</div> </div>	<div> <div>3rd ANGLE PROJECTION</div> <div>A</div> </div>
	JmJ	2/15/98				
	DRAWN BY	DATE	APPROVED BY	DATE		
	FINISH:					
	DIE No.				2" SAFETY BOTTOM BRACKET ASSEMBLY	852SB6020X
					PART NAME	DRAWING NO.