

MODELS: L955W, 003-0859-002, & 041-0491-000

Product Manual



Overview

Your Multi-Function Control Panel is compatible with Security+ 3.0™ garage door openers. All Security+ 3.0 garage door openers have a white learn button. The images throughout this manual are for reference only and your product may look different.

⚠ A WARNING

To prevent possible SERIOUS INJURY or DEATH from electrocution:

- Be sure power is NOT connected BEFORE installing door control.
- · Connect ONLY to 12 VOLT low voltage wires.

To prevent possible SERIOUS INJURY or DEATH from a closing garage door:

- Install door control within sight of garage door, out of reach of children at a minimum height of 5 feet (1.5 m), and away from ALL moving parts of door.
- NEVER permit children to operate or play with door control push buttons or remote control transmitters.
- · Activate door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep garage door in sight until completely closed. NEVER permit anyone to cross path of closing garage door.
- Unattended devices and features are to be used ONLY with sectional doors.



WARNING: This product can expose you to chemicals including lead, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.


Contents

Overview	•
Installation3	}
Tools Required3	
Hardware Included	
Wire the Control Panel3	
Mount the Control Panel4	ŀ
Wire to Garage Door Opener5	
Programming the Control Panel to Your Garage Door Opener6)
Features and Operation	,
Program a Remote Control or Wireless Keypad to Your Garage Door Opener 8	}
Additional Resources9)


Installation

Install the control panel within sight of the garage door at a minimum height of 5 feet (1.5m) where small children cannot reach, and away from moving parts of the door.

Tools Required

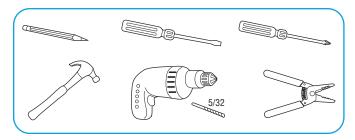


Hardware Included

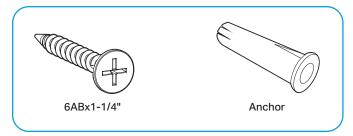


Wire the Control Panel


Unplug the garage door opener to prevent the garage door opener from activating during wiring. Disconnect the garage door opener battery (if applicable).

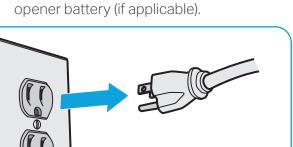

Separate the wires and strip 7/16 inch (11 mm) of insulation from the end of each wire.

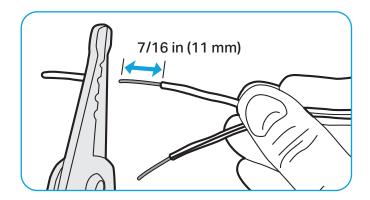


Connect one wire to each of the two screws on the back of the door control. The wires can be connected to either screw.

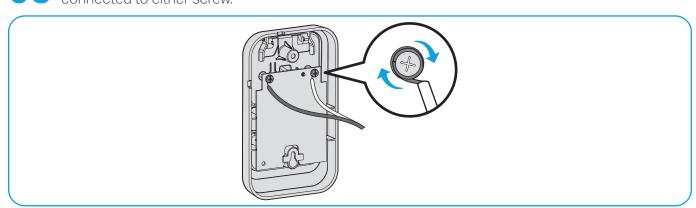


Installation (continued)

Mount the Control Panel


Mark the location of the bottom mounting hole and drill a 5/32 inch (4 mm) hole.

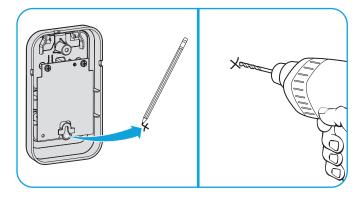


Position the bottom hole of the control panel over the screw (a) and slide down into place (b).

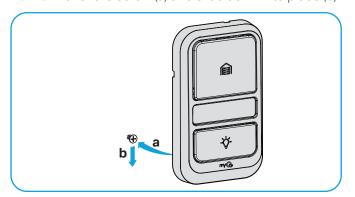


Remove the control panel from the wall and drill a 5/32 inch (4 mm) hole for the top screw. Tap in anchor with hammer if installing on drywall.

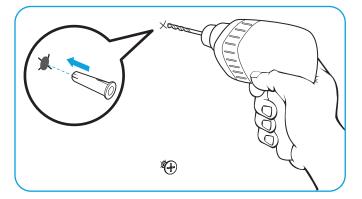


Tap in anchor with hammer if installing on drywall. Install the bottom screw, allowing 1/8 inch (3 mm) to protrude from the wall.

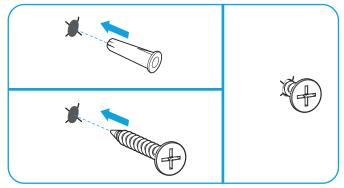

Lift up the control panel push bar and mark the top hole.

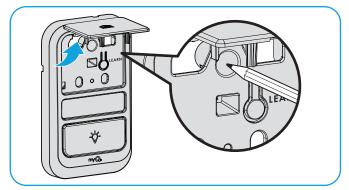


Position the bottom hole of the control panel over the screw and slide down into place. Install the top screw and close the push bar.

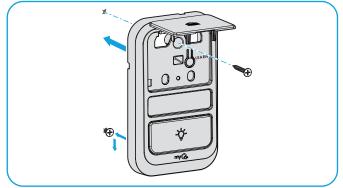


Installation (continued)

Wire to Garage Door Opener


Separate the wires and strip 7/16 inch (11 mm) of insulation from the end of each wire.

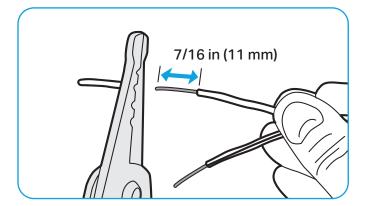


Connect one of the wires to the red terminal and the other wire to the white terminal. To insert or release wire, push in tab with screwdriver tip.

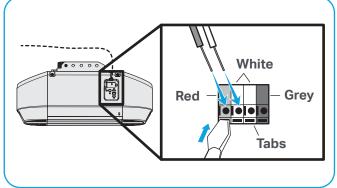

Reconnect power to the garage door opener.

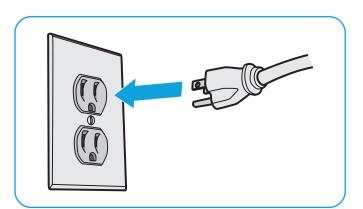

The command LED will flash until the control panel has been programmed to the garage door opener. See page 6 for programming instructions.

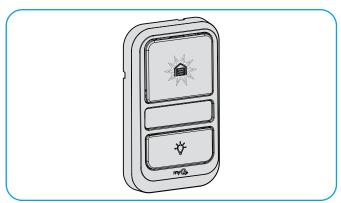


If the control panel command LED does not light up, first, verify the wires to both the control panel and garage door opener are installed properly. Having done so, if the control panel command LED does not light up, check for breaks or a short in the wires. If either are found, replace the wire.


Programming the Control Panel to Your Garage Door Opener

Locate the LEARN button on your garage door opener (a ladder may be required).

Press and **immediately** release the LEARN button. The LEARN button LED will turn on solid.

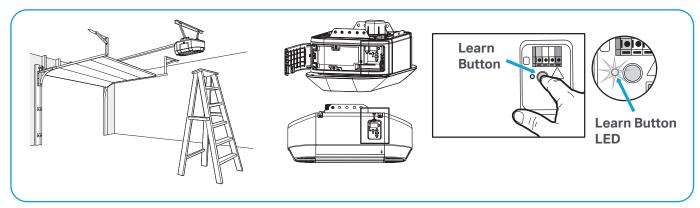


Within 30 seconds, press and hold the control panel push bar until the garage door opener lights flash **and/or** two clicks are heard.

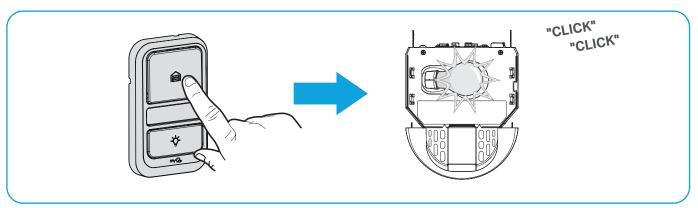

TEST FOR SUCCESS: Press the control panel push bar. The garage door opener will activate. If the garage door does not activate, repeat the programming steps.

Features and Operation

Features

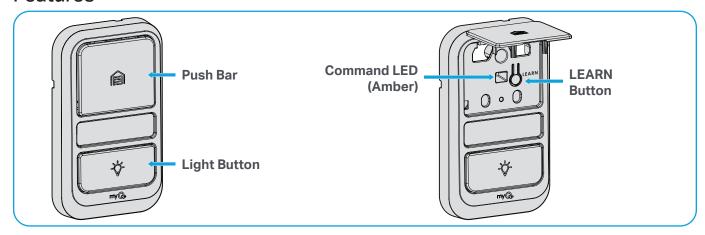

Operation

Push Bar

Press push bar to open / close the garage door.

Light Button

Press the light button to turn the garage door opener lights on or off. When the lights are turned on they will stay on until the light button is pressed again, or until the garage door opener is activated. Once the garage door opener is activated the lights will turn off after a specified period of time (the factory setting is 4 1/2 minutes). The light button will not control the lights when the door is in motion.

NOTE: Connect your garage door opener to the myQ app to manage the length of time the light stays on.

Light Feature for the Safety Reversing Sensors


The garage door opener lights will turn on when the safety reversing sensor beam is interrupted. Factory default is ON.

Turn ON: Start with the garage door opener lights on. Press and hold the light button to turn off the light, continue to hold until the light turns on (about 10 seconds).


Turn OFF: Start with the garage door opener lights off. Press and hold the light button to turn on the light, continue to hold until the light turns off (about 10 seconds).

Program a Remote Control or Wireless Keypad to Your **Garage Door Opener**

Lift the push bar. Press the LEARN button twice (after the second press, the LED on the door control panel will pulse repeatedly).

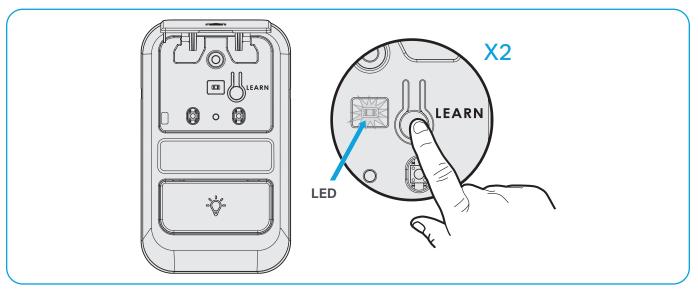


Within 30 seconds, press and hold the button on the remote control that you 02a wish to use. Release the button when the garage door opener lights flash and/or two clicks are heard.

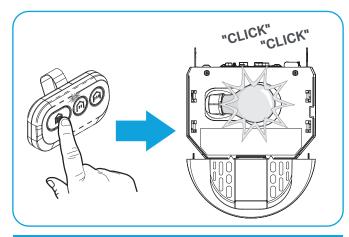

TEST FOR SUCCESS: Press the remote button you programmed. The garage door opener will activate. If the garage door does not activate, repeat the programming steps.

Within 30 seconds, enter a 4-8 digit personal identification number (PIN) of your choice. Press and hold the HOME button until the garage door opener lights flash and/or two clicks are heard.

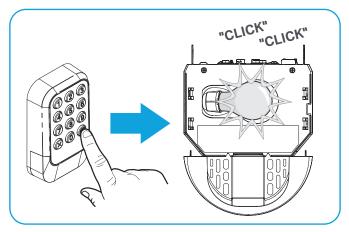

TEST FOR SUCCESS: With the garage door closed, enter the PIN you programmed and press the HOME button. The garage door opener will open the door. If the garage door does not open, repeat the programming steps.

Additional Resources

One Year Limited Warranty

The Chamberlain Group LLC ("Seller") warrants to the first consumer purchaser of this product that it is free from defect in materials and/or worksmanship for a period of 1 year from the date of purchase.

For more information, visit www.myg.com/warranty

Contact Us

For additional information or assistance, please visit: support.chamberlaingroup.com

NOTICE: This device complies with part 15 of the FCC rules and Innovation, Science and Economic Development Canada license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

HOW TO ORDER REPAIR PARTS

DEVANCO*CANADA

19192 HAY ROAD, UNIT Q SUMMERSTOWN,ON, KOC 2EO

TOLL FREE **1-855-931-3334** WWW.DEVANCOCANADA.COM

WHEN ORDERING REPAIR PARTS
PLEASE SUPPLY THE FOLLOWING INFORMATION:

✓ PART NUMBER

✓ DESCRIPTION

✓ MODEL NUMBER

©2025 The Chamberlain Group LLC

myQ and the myQ logo are trademarks, service marks, and/or registered trademarks of The Chamberlain Group LLC. All other trademarks, service marks and product names used herein are the property of their respective owners. The Chamberlain Group LLC. 300 Windsor Drive, Oak Brook, IL, 60523, United States See chamberlain.com/patents