

# Hercules 2s User Manual

Microwave motion sensor for  
industrial doors

## 1 Introduction

### 1.1 Product Description

Hercules 2s is an advanced planar microwave motion sensor designed for industrial doors and gates. The sensor can differentiate between people and vehicles. Its two relay outputs can be programmed independently for a multitude of applications. Hercules 2s also features cross-traffic optimization and slow-motion detection.

### 1.2 Box Contents & Tools Required

The box contains the following items:


- A** Hercules 2s sensor with pre-wired 23' (7m) 6-wire cable
- B** Self-adhesive mounting template
- C** Instruction manual
- D** Quick reference guide for RC Duo 2 remote control (stores in slot on battery compartment cover)

#### Tools recommended for installation:


- Ladder
- Tape measure
- Level
- Drill with 1/4" (5mm) drill bit
- Electric screwdriver with bit to match mounting screws
- AWG 4 (5 mm dia) wire stripper for cable sleeve
- AWG 24 (0.20 mm $\varnothing$ ) wire stripper for single wires



#### Other items recommended for installation:

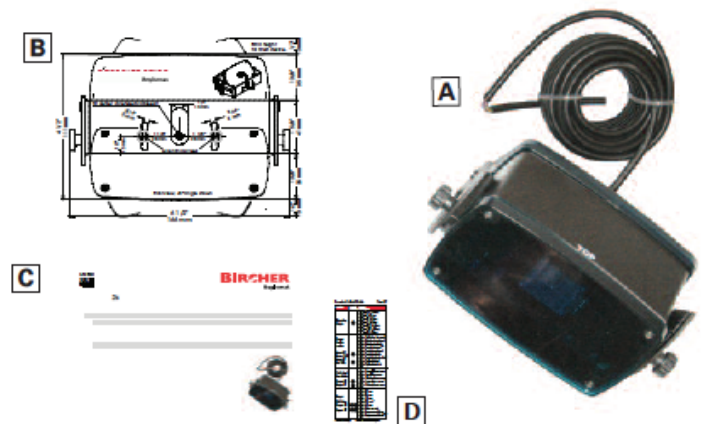- Mounting screws (x2) sized for 3/16" (5mm) hole
- RC Duo 2 remote control (Part # S-RC2)

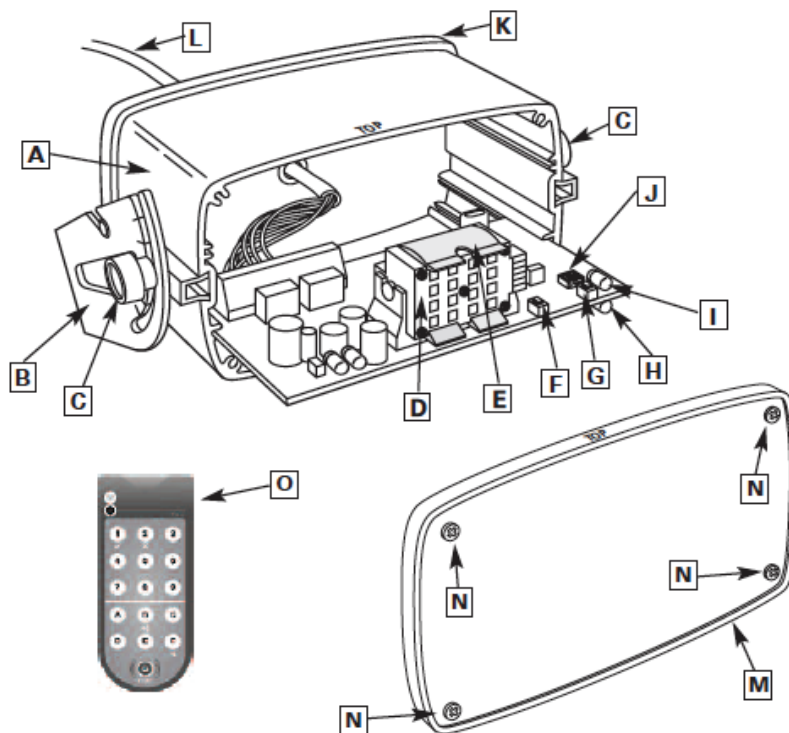

### 1.3 Parts of the Sensor



- A** Housing (aluminum)
- B** Mounting bracket
- C** Inclination angle handscrews (x2)
- D** Microwave planar module
- E** Clip for wide detection pattern (Use setting for wide field pattern - sec. 7.2)
- F** Left button  to set function
- G** Right button  to set value
- H** Output 1 indicator (green LED)
- I** Output 2 indicator (red LED)
- J** DIP switches (for setting remote control addresses 1-4)
- K** Rear cover
- L** Connection cable
- M** Front cover
- N** Cover screws (x4)
- O** RC Duo 2 remote control required to access complete set of functions

## 2 Safety Precautions



### 2.1 General Safety

**Warning: failure to follow these safety precautions may cause damage to sensor or objects, serious personal injury, or death.**

- This product is designed to be mounted above an overhead industrial door.
- Do not use this product other than for its specified application.
- Observe all applicable local, national, and international door safety standards, codes, and laws.
- Only trained and qualified personnel may install and initialize the sensor.
- Only authorized Bircher Reglomat personnel may perform hardware/software changes or repairs to the product.
- The unit should only be operated from a safety extra low voltage (SELV) system with safe electrical separation.
- Always consider the safety functions of your applications as a whole, never just in relation to one individual section of the system.
- The installer is responsible for testing the system to ensure it meets all applicable safety standards (e.g. UL-325).
- Never touch any electronic components or lenses.
- After accessing the inside of the sensor, ensure the cover/protection seal is closed tightly to achieve designated protection rating.




### 2.2 Installation Safety

- Follow all steps outlined in this manual in order for proper installation of the product.
- Stop all traffic through the door before installing sensor.
- Ensure there is no vehicle or pedestrian traffic through the door until sensor is installed and tested for compliance with all applicable safety standards (e.g. UL-325).
- Verify proper installation of door equipment before installing sensor.
- Shut off all power before attempting any wiring procedures.
- Always use wire terminals to terminate stranded wire ends.
- Check placement of wiring to ensure moving parts are not impeded by wires.
- Make sure wiring is correct before applying power to the sensor to avoid damage to equipment.
- Ensure door & header, including housing components, are properly grounded to protective earth (PE).
- Ensure (e.g. by walk testing) that installation is in compliance with all applicable standards (e.g. UL-325) after completion of installation.
- If the sensor sustains damages (e.g falls), replace it with a new unit.


**DO NOT LEAVE ANY PROBLEMS UNRESOLVED! DO NOT SACRIFICE SAFETY FOR ANY REASON!**

## 3 Mounting the Sensor


### 3.1 Special Considerations

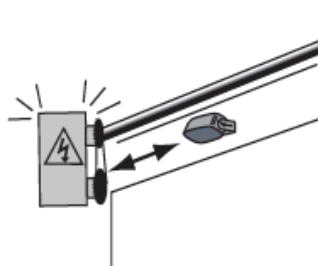


Ensure sensor is firmly mounted on a flat surface. Avoid vibrations.

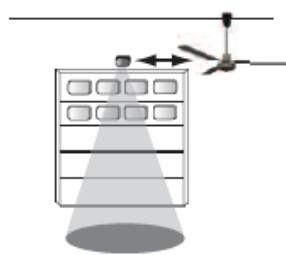

Objects such as fans, plants, flags, etc must not protrude into the detection area.

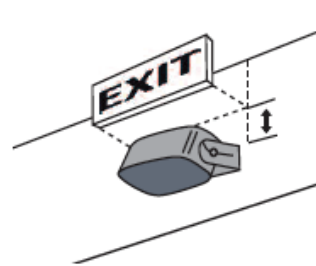

Obstruction can effect performance of sensor. Make sure sensor has an unobstructed view.

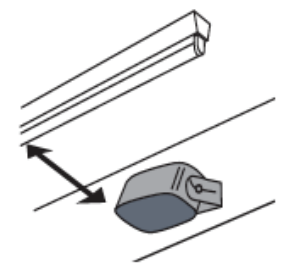


Mount sensor away from fluorescent or HID light sources.

### 3.2 Mounting Instructions

1. Remove sensor unit from mounting bracket by loosening handscrews.
2. Affix the self-adhesive mounting template to the wall or ceiling and drill holes in specified locations. Remove the template once the holes have been drilled.
3. Route the cable through the opening in the mounting bracket and ensure cable length is sufficient to accommodate desired inclination angle.
4. Secure the mounting bracket tightly to the wall or ceiling using screws.
5. Attach sensor to mounting bracket by aligning the pins and screws on the sensor with the slots on the mounting bracket. Ensure both sides are seated properly. Tighten handscrews to secure.
6. Connect cable to door operator (refer to door operator manual for wiring diagram).

#### Attaching the sensor to the bracket

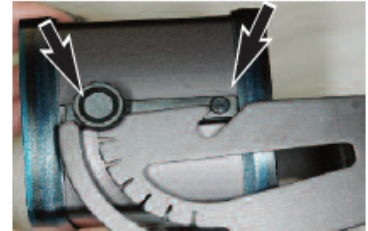


#### Ideal mounting location


Center over door



#### Self-adhesive mounting template

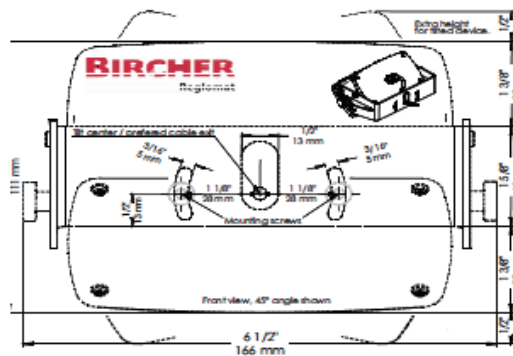


#### Optional ceiling mounting

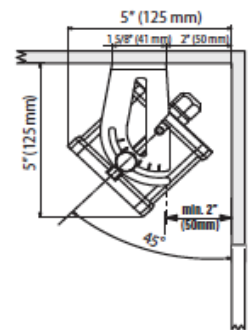


### 3.3 Inclination Angle

After mounting, adjust the inclination angle to the desired detection pattern. Adjust the inclination angle by loosening the handscrews on the sides of the sensor and adjusting as shown below. Range is 0 - 90°, in 15° increments as marked on the mounting bracket. 30 - 45° is typical for most applications.

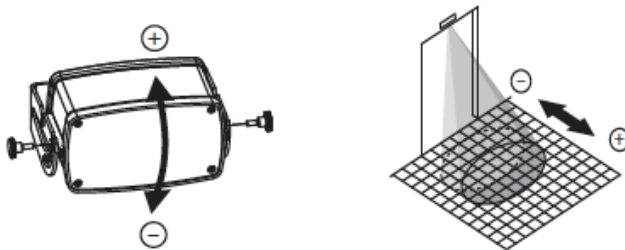


### 3.4 Tilt Angle


It may be necessary to tilt the sensor for certain applications (not recommended unless warranted by special circumstances). To do so, loosen the handscrews and remove the sensor from the bracket. Once the mounting screws are accessible, loosen them enough to twist the bracket to change the tilt of the sensor.

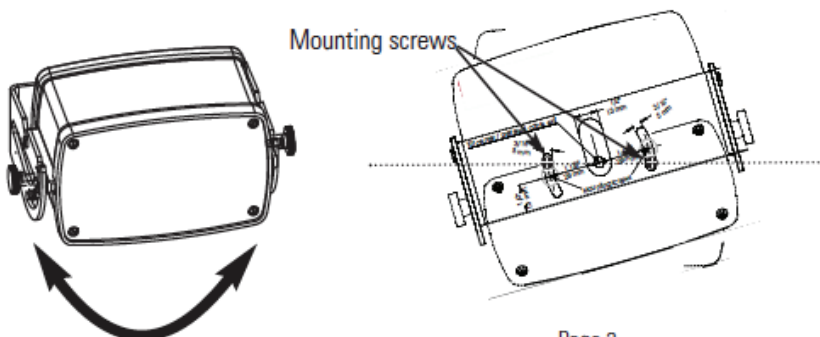

#### Example of application requiring tilt adjustment

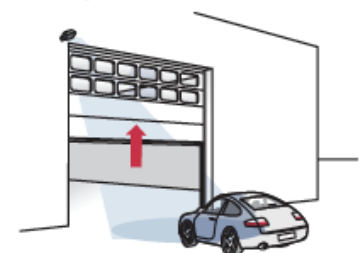

## 4 Electrical Connection

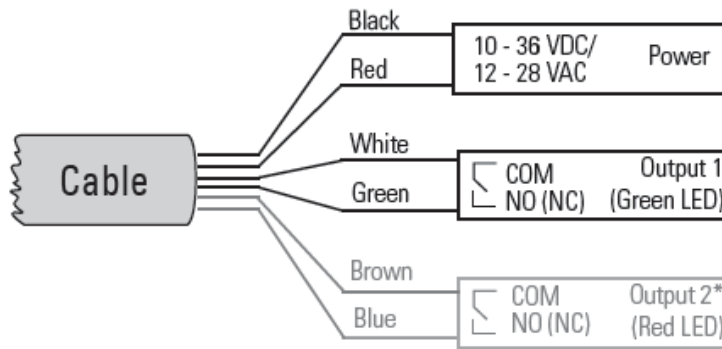

See table on pages 6 & 7 for detailed information on output 1

\*Factory setting = Output 2 off

See table on pages 6 & 7 for detailed information on output 2

### 4.1 Initialization

Startup sequence after power has been connected to the sensor:

- Both green & red LED's begin to blink slowly
- Green LED will continue to blink quickly


## 5 Introduction to the RC Duo 2 Remote Control

The RC Duo 2 remote control allows Hercules 2s to be easily and conveniently programmed from the ground. Data transfer between the RC Duo 2 and Hercules 2s functions in both directions, i.e. to and from the sensor by an infrared interface. The RC Duo 2 reads back the adjusted values immediately after programming and displays them on the remote to ensure accurate programming.

**Flashing buttons on the RC Duo indicate that the data has not been fully transmitted.**

Avoid exposing the infrared interface to direct sunlight or other light sources.

### 5.1 Layout of the RC Duo 2 Remote Control

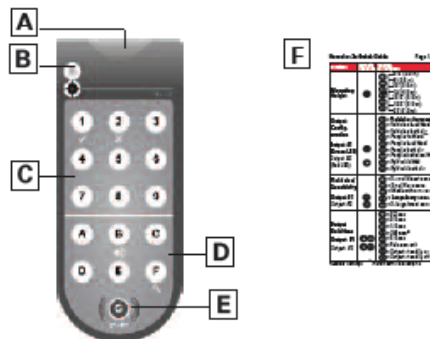

- A** Transmitter/receiver (infrared)
- B** Status indicator LED
- C** Numerical buttons (1 to 9)
- D** Function buttons (A to F)
- E** Start button:
  - a) Powers on (hold 2 sec)
  - b) Establishes connection to the sensor
- F** Remote function quick reference guide (stored in slot on battery compartment cover)  
This guide is included in every Hercules2s box

### 5.2 Turning on the RC Duo 2 Remote Control



**The RC Duo 2 must be powered on before use.**

**POWER ON:** Press and hold **G** for 2 seconds


**POWER OFF\*:** Press and hold **G** for 2 seconds

\*The remote will automatically turn off after 2 minutes if no button is pressed.



### 5.3 Establishing Connection to the Sensor

The RC Duo 2 functions bidirectionally with the sensor. This means that changes to the settings on the sensor are immediately signaled back by the sensor to the remote control. If an additional parameter is programmed within 2 minutes of the previous parameter, it is not necessary to press **G** to re-establish connection to the sensor each time.



Ensure sensor is in programming mode (section 6.1)

Once **G** blinks, press **G** again to establish connection.



The sensor's address illuminates on the keypad.


EXAMPLE: address **7** (factory setting)



Choose function to be programmed. See chart on following pages for complete list.

Press the desired function (letter) button.

EXAMPLE: mounting height **A**



The sensor acknowledges its current setting by illuminating it on the keypad.

EXAMPLE: **4** = 13-16'6" ft (4-5 m) (factory default)



Now press desired new value.

EXAMPLE: Desired height = 11 ft 3" (3 m) Choose **3** = 10 - 13' (3-4 m)



The new setting is immediately saved and displayed on the keypad.

Programming of this function is now complete. Repeat for other functions if necessary.

**⚠ Note:** If any buttons are blinking, programming failed. In this case, repeat programming.

## 6 Functions & Settings - Programming by Remote Control

### 6.1 Entering Sensor Programming Mode


The connection between the RC Duo 2 and Hercules 2s can only be established when the sensor is in programming mode (unlocked). Programming mode is activated when the sensor is switched on. For safety reasons, this mode is automatically deactivated 30 minutes after the last setting has been made on the sensor. The sensor can be locked at any time by pressing **F** **B** followed by **B**.

Programming mode can be activated in three different ways:

#### A) Restart the sensor (temporarily disconnect the supply voltage)




#### B) Briefly press one of the buttons inside the sensor unit, **L** or **R**

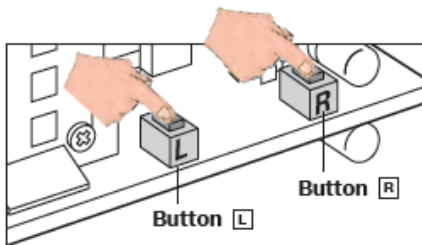


To access programming buttons, open the front cover of the sensor by removing 4 screws.

Replace cover and close securely once button has been pressed.

#### C) Enter access code with remote control



Press **G** to establish connection to the sensor. The sensor address will illuminate.

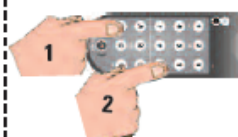

Press **D** followed by **9** and enter the 4-digit preset **access code**, followed by **D**.



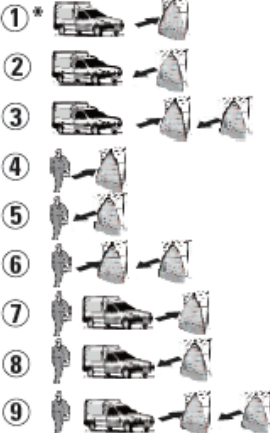
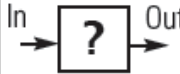
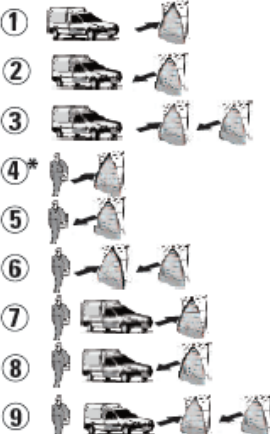

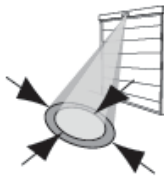
EXAMPLE:  
**D 9 1 2 3 4 D**

Sensor is now in programming mode.










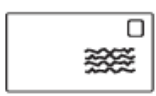


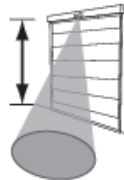If parameters cannot be changed (buttons blink), repeat sequence.

If connection is still not established, **use option A or B above** (no access code was previously stored.)

## 6.2 Programming Sensor Functions by Remote Control

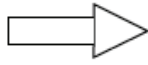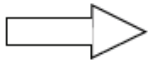Sensor Function	RC Duo 2 Function	Description Factory Settings in <b>bold</b> with *
<b>Mounting Height</b> 	<b>A</b>	— 6' 6" (2.0 m) ① — 8' (2.5 m) ② — 10' (3.0 m) ③ — <b>13' (4.0 m)</b> ④* — 16'6" (5.0 m) ⑤ — 19'6" (6.0 m) ⑥ — 23' (7.0 m)
<b>Output #1 Configuration</b> Green LED White & green wires 	<b>B</b>	 <ul style="list-style-type: none"> <li>①* <b>Vehicles forward</b></li> <li>② Vehicles backward</li> <li>③ Vehicles both directions</li> <li>④ People forward</li> <li>⑤ People backward</li> <li>⑥ People both directions</li> <li>⑦ People &amp; vehicles forward</li> <li>⑧ People &amp; vehicles backward</li> <li>⑨ People &amp; vehicles both directions</li> </ul>
<b>Output #2 Configuration</b> Red LED Brown & blue wires To activate this output, press <b>F ②</b> followed by <b>①...⑦</b> 	<b>C</b>	 <ul style="list-style-type: none"> <li>① Vehicles forward</li> <li>② Vehicles backward</li> <li>③ Vehicles both directions</li> <li>④* <b>People forward</b></li> <li>⑤ People backward</li> <li>⑥ People both directions</li> <li>⑦ People &amp; vehicles forward</li> <li>⑧ People &amp; vehicles backward</li> <li>⑨ People &amp; vehicles both directions</li> </ul>
<b>Output #1 Field size/sensitivity</b> 	<b>D</b>	① X-Small field/least sensitive ② Small field/less sensitive ③ Medium field/normal sensitivity ④* <b>Large field/very sensitive</b> ⑤ X-Large field/most sensitive
<b>Output #2 Field size/sensitivity</b> 	<b>E</b>	① X-Small field/least sensitive ② Small field/less sensitive ③ Medium field/normal sensitivity ④* <b>Large field/very sensitive</b> ⑤ X-Large field/most sensitive

\* Factory settings


Sensor Function		RC Duo 2 Function	Description Factory Settings in <b>bold</b> with *
Output #1 Hold Time		<b>F 1</b>	<ul style="list-style-type: none"> <li>① 0.2 sec</li> <li>② 0.5 sec</li> <li>③ 1.0 sec</li> <li>④ * <b>2.0 sec</b></li> <li>⑤ 5.0 sec</li> <li>⑦ Pulse on exit</li> <li>⑧ Output steadily on (for testing purposes only)</li> <li>⑨ Output steadily off</li> </ul>
Output #2 Hold Time		<b>F 2</b>	<ul style="list-style-type: none"> <li>① 0.2 sec</li> <li>② 0.5 sec</li> <li>③ 1.0 sec</li> <li>④ 2.0 sec</li> <li>⑤ 5.0 sec</li> <li>⑦ Pulse on exit</li> <li>⑧ Output steadily on (for testing purposes only)</li> <li>⑨ * <b>Output steadily off</b></li> </ul>
Output #1 Logic		<b>F 3</b>	<ul style="list-style-type: none"> <li>① * <b>NO</b></li> <li>② NC</li> </ul> 
Output #2 Logic		<b>F 4</b>	<ul style="list-style-type: none"> <li>① * <b>NO</b></li> <li>② NC</li> </ul> 
Cross-Traffic Optimization (CTO)		<b>F 5</b>	<ul style="list-style-type: none"> <li>① * <b>Off - Door always activates when any crossing traffic is detected</b></li> <li>② Low - Door occasionally activates when crossing traffic is detected</li> <li>③ Medium - Door rarely activates when crossing traffic is detected</li> <li>④ High - Door ignores most crossing traffic</li> </ul>
Interference Filter		<b>F 6</b>	<ul style="list-style-type: none"> <li>① <b>Off*</b></li> <li>② On - Use when electromagnetic sources such as fluorescent bulbs, HID lights, wireless systems, motors/inverters are causing interference</li> </ul>
Slow Motion Detection (SMD) (People only)		<b>F 7</b>	<ul style="list-style-type: none"> <li>① <b>Off*</b></li> <li>② On - holds door open as long as people are slightly moving in front of the door (LED will blink)</li> </ul>
Remote control communication address		<b>F 8</b>	<ul style="list-style-type: none"> <li>⑤-⑦ Available addresses that can be set by remote</li> <li>⑦ * Factory setting</li> <li>⑨ Reads &amp; sets address (1-4) set by DIP switch on sensor unit Once address is changed, press <b>G</b> to re-establish connection with sensor</li> </ul>
Set Access Code (To unlock sensor see page 5)		<b>D 9</b>	<p><b>⚠ Before setting access code, always use delete access code</b></p> <p>To set access code, enter <b>D 9</b> followed by any 4-digit number from <b>①①①①-⑨⑨⑨⑨</b> ending with <b>D</b>. Access code is now stored.</p> <p>To delete access code, enter <b>D 9 ⑨⑨⑨⑨</b> ending with <b>D</b></p>
Delete Access Code			
Lock Sensor to Remote Access		<b>F 8</b>	<ul style="list-style-type: none"> <li>⑧ Forces sensor to exit programming mode. Further changes cannot be made until programming mode is entered again (See section 6.1).</li> </ul>
Factory Reset		<b>A</b>	<ul style="list-style-type: none"> <li>⑨ Completes factory reset All settings listed in this table with * will be restored.</li> </ul>

\* Factory settings

## 7 Functions & Settings - Programming Sensor with Buttons on Unit

In cases when no remote control is available, several crucial functions can be programmed by using the buttons on the sensor unit. All remaining functions must be configured by remote control.

- 1) **Unscrew** all front cover screws and remove the front cover to locate buttons.
- 2) **Briefly** press **L** and **R** simultaneously to enter programming mode
- 3) Press button **L** to change the **function**. The function increases by 1 for every button press. Once the last function has been reached, the program returns to the first function. The red LED flashes to indicate the number of the activated function.
- 4) Press button **R** to change the **value**. The value increases by 1 for every button press. Once the last value has been reached, the program returns to the first level.
- 5) **Briefly** press **L** and **R** simultaneously to exit programming mode or wait 25 sec and the sensor will exit automatically.

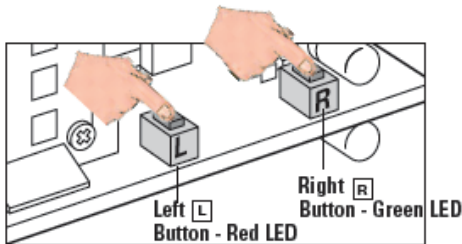

- 6) Replace the front cover and tighten all 4 screws.



Function	Function # (Button L / Red LED)	Values (Button R / Green LED)
Mounting Height	1	1-6 (see table on pg 6)
Output 1 Configuration	2	1-9 (see table on pg 6)
Output 1 Field Size/Sensitivity	3	1-5 (see table on pg 6)
Wide Field Setting	4	1-2 (see sec. 7.1 below)

### 7.1 Wide Field

#### 1) Activate the wide field setting


- !** If wide sensing field is desired, follow programming instructions below **and** use the clip accessory on the sensor unit. **The sensor will not function correctly if the clip is used without the proper wide field setting or vice versa.** The wide field setting is only available for for mounting heights up to 13 ft (4 m). Sensor will not allow wide field setting to be activated if a higher mounting height is selected.

Normal field without clip\*      Wide field with clip

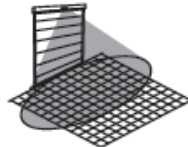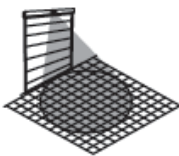


Value	Wide Field Setting
1	Off*
2	On


\* factory setting

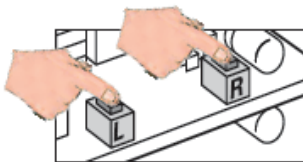


**Briefly** press **L** and **R** simultaneously to enter programming mode.

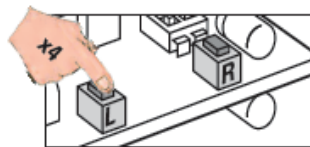

Press **L** 3 times to enter wide field function. The red LED will blink 4 times.

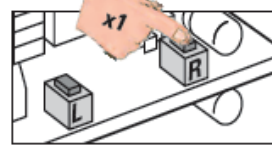

Press **R** once to turn on wide field and twice to turn off (factory setting = off). The green LED will blink the corresponding # of times to verify selection

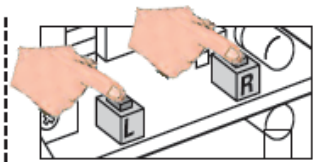

**Briefly** press **L** and **R** simultaneously to exit programming mode.


**Changes are saved immediately.**




## 2) Mount the clip



Loosen & remove the screws securing the front cover.

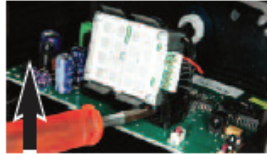


Insert a screwdriver under the microwave module and pry upwards to loosen it from the black plastic mounting bracket.

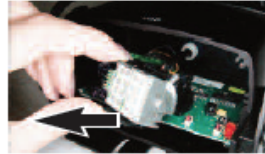


Grasp the module and remove it from the housing.




Remove the clip from the back of the microwave planar module.

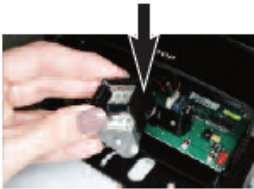

Align the clip with the front of the microwave planar module and carefully slide into position.

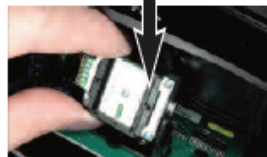

Re-insert the microwave module into the black plastic brackets until it clicks into place. Ensure both sides are fully seated.

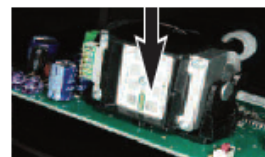


Ensure the microwave module is pointed to the lowest possible angle.



Close cover and re-tighten screws.


## 7.2 Programming Addresses 1-4 (by DIP Switch on the Sensor)

Unscrew the 4 front cover screws and remove the front cover of the sensor to locate the DIP switches (refer to section 1.3 for more information). Ensure the cover is closed securely when addressing is complete.

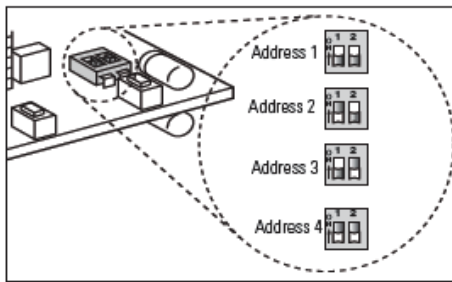

## 7.3 Factory Reset

- Press **L** and **R** simultaneously and hold for **8 seconds**.
- Every 2 seconds, one LED illuminates briefly.
- Both LED's illuminate after 8 seconds
- The reset is complete when both buttons are released.


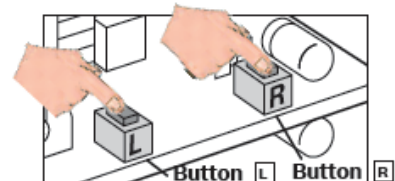


## 8 Troubleshooting


Fault	Remedy
People/vehicle separation does not work as expected	Check mounting height & setting (recommended >10ft / 3m) Check mounting situation & environment (best: sensor centered above door) Check setting/clip for wide field pattern
Late detection of traffic	Increase field size/sensitivity Adjust inclination angle to move the pattern away from the door
Door reverses (sensor reacts to closing door)	Adjust inclination angle to move the pattern away from the door Reduce field size/sensitivity Make sure sensor is tightly fixed and its mounting support does not vibrate
Door opens without motion of a vehicle (or person)	Mount sensor away from EMC interference (e.g. fluorescent tubes, HID lamps, wireless system, motor/inverter, etc.) Point pattern away from EMC interference Activate interference filter
Door does not activate though sensors signals detection (LEDs)	Check wire colors against output selection
Late detection or non-detection of people	Reduce mounting height (recommended < 16ft / 5m)
Door stays open	Change output logic

## 9 Wiring Diagrams

### 9.1 Chamberlain LiftMaster

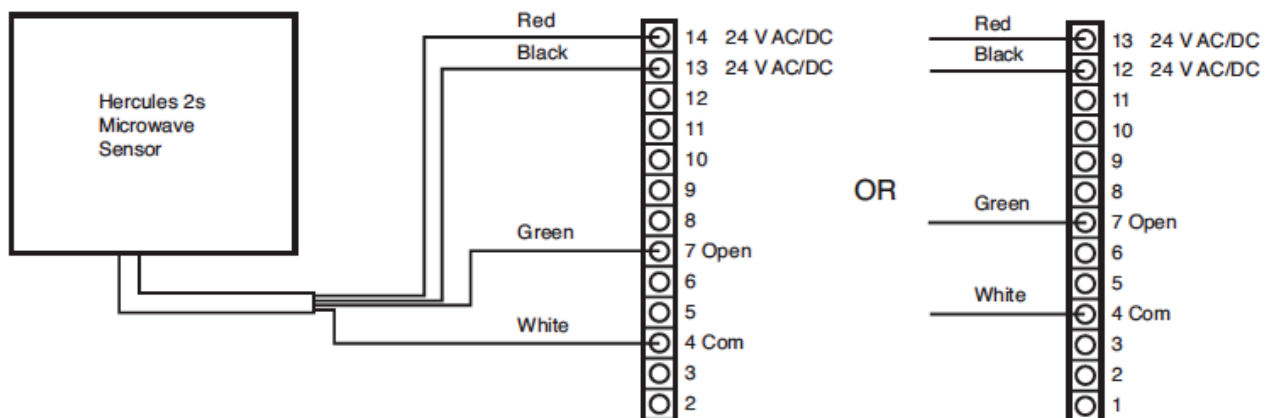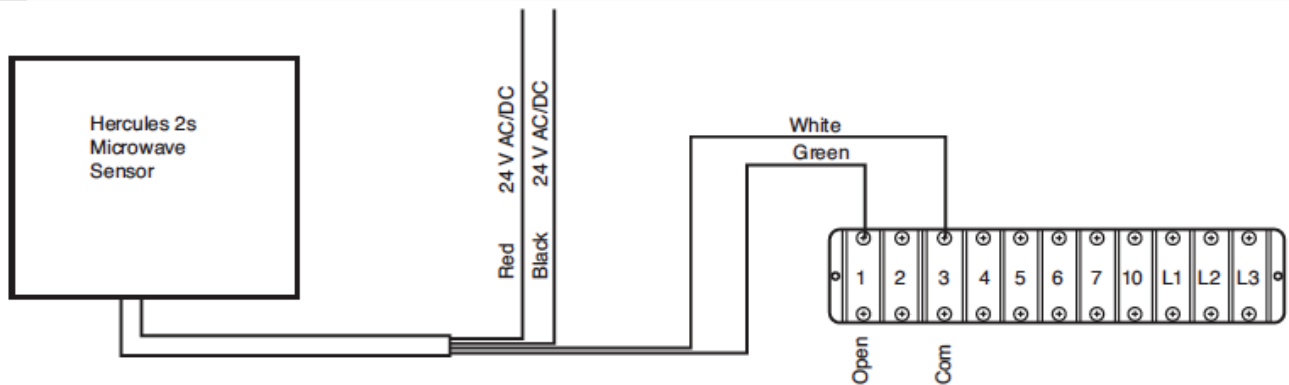

## 9.2 Rytec Predador

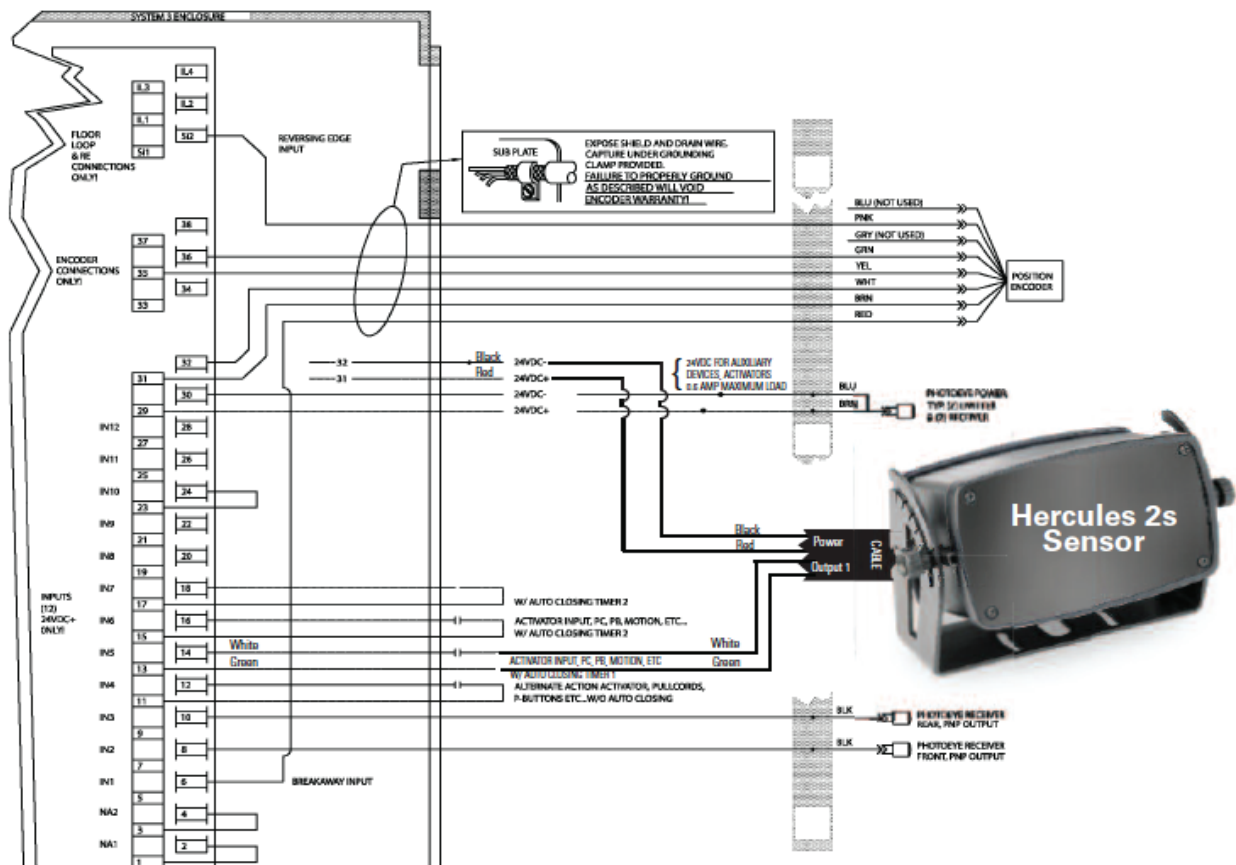

## 10 FCC Approval

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: this device may not cause harmful interference, this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna, increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected, consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this equipment not expressly approved by Bircher Reglomat may void the FCC authorization to operate this equipment.

## 11 Technical Data

Specification	Value
Technology	Doppler radar with planar module: 24.05 - 24.25 GHz, <20 dBm
Detection speed	Max. 16 mph (25 km/h) for vehicles
Outputs	2 Relays NO(NC): 48 VAC/DC, 0.5 A (55VA/24W)
Mounting height	6' 6" to 23' (2 to 7 m)
Operating voltage	10 - 28 VAC (45 - 65 Hz) 12 - 36 VDC
Operating current	Max. 75 mA
Protection class	NEMA 4 (IP65)
Temperature range	-22° to 140° F ( -30° to 60° C) - 0% to 95% relative humidity, no condensation
Housing material	Aluminum housing, polycarbonate cover
Dimensions with mounting bracket	Max. L x W x D = 6 3/4" x 4 3/8" x 4 3/4" (170 x 110 x 120 mm) see mounting template for more information
Weight	1.8 lb (820 g) including cable
Product designation	Hercules 2s

## 12 Recommended Accessories



### RC Duo 2 Remote Control

Part # 991005

Required to access complete set of functions

**For more information,  
please visit [www.devancocanada.com](http://www.devancocanada.com) or call toll free at 855-931-3334**

**BIRCHER**  
Reglomat

 **IDA**  
International Door Association

Member  
 **DASMA**  
Door & Access Systems  
Manufacturers Association  
International

***HOW TO ORDER  
REPAIR PARTS***

**DEVANCO CANADA**

19192 HAY ROAD, UNIT Q  
SUMMERSTOWN, ON K0C 2E0

TOLL FREE: 855-931-3334

[www.devancocanada.com](http://www.devancocanada.com)

**WHEN ORDERING REPAIR PARTS  
PLEASE SUPPLY THE  
FOLLOWING INFORMATION:**

- ✓ PART NUMBER
- ✓ DESCRIPTION
- ✓ MODEL NUMBER